


OPERATING AND SERVICE MANUAL

# ASCII TO PARALLEL CONVERTER 59301A

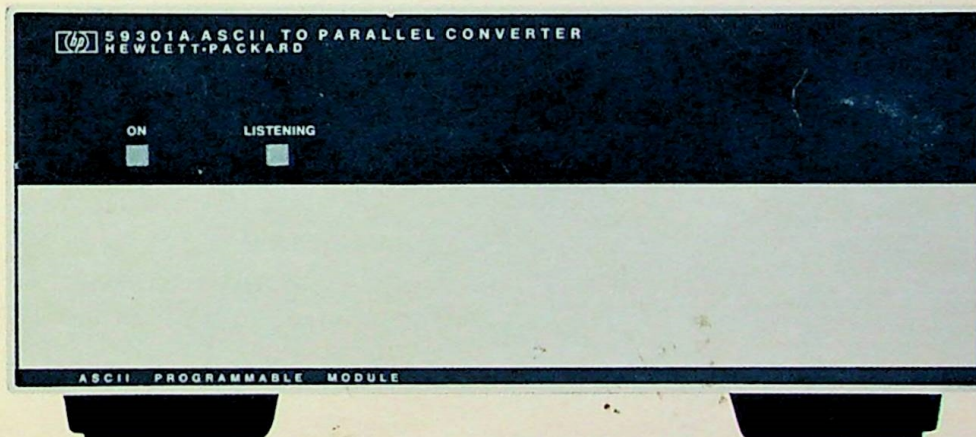

HEWLETT  PACKARD







## **CERTIFICATION**

*The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facility.*

## **WARRANTY AND ASSISTANCE**

This Hewlett-Packard product is warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery, or, in the case of certain major components listed in the manual, for the specified period. We will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office.







# ASCII TO PARALLEL CONVERTER 59301A

**SERIAL PREFIX: 1328A**

This manual applies directly to Hewlett-Packard Model 59301A with serial prefix 1328A. For instruments with serial prefixes above 1328A, a manual change sheet is supplied. For instruments with serial prefixes below 1328A, refer to Section VII.

Copyright      HEWLETT-PACKARD COMPANY      1973  
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

**Printed: AUGUST 1973**

HEWLETT  PACKARD



RESEARCH REPORT  
1971

THE EFFECT OF  
TEMPERATURE ON  
THE GROWTH OF  
PLANTS

BY  
J. H. HARRIS



# TABLE OF CONTENTS

Section		Page
I	GENERAL INFORMATION .....	1-1
	1-1. Introduction .....	1-1
	1-3. Description .....	1-1
	1-5. Instrument Description .....	1-1
	1-7. Equipment Supplied .....	1-1
	1-9. Specifications .....	1-1
II	INSTALLATION .....	2-1
	2-1. Introduction .....	2-1
	2-3. Unpacking and Inspection .....	2-1
	2-5. Storage and Shipment .....	2-1
	2-8. Power Requirements .....	2-1
III	OPERATION AND PROGRAMMING .....	3-1
	3-1. Introduction .....	3-1
	3-3. Controls, Indicators, and Connectors .....	3-1
	3-5. Programming .....	3-3
	3-7. Special Action Codes .....	3-3
IV	THEORY OF OPERATION .....	4-1
	4-1. Introduction .....	4-1
	4-3. Integrated Circuit Operation .....	4-1
	4-4. Eight-bit Serial-in Parallel-out Shift Register, 1820-0294 .....	4-1
	4-6. 1024-bit Read-only memory, 1816-0257 .....	4-1
	4-8. Functional Block Diagram Description .....	4-1
V	MAINTENANCE .....	5-1
	5-1. Introduction .....	5-1
	5-3. Test Equipment .....	5-1
	5-5. In-Cabinet Performance Check .....	5-1
	5-8. Troubleshooting .....	5-3
VI	REPLACEABLE PARTS .....	6-1
	6-1. Introduction .....	6-1
	6-4. Ordering Information .....	6-1
VII	OPTIONS AND MANUAL CHANGES .....	7-1
	7-1. Introduction .....	7-1
	7-3. Manual Changes .....	7-1
	7-5. Newer Instruments .....	7-1
	7-7. Older Instruments .....	7-1
VIII	SCHEMATIC DIAGRAMS .....	8-1
	8-1. Introduction .....	8-1

## LIST OF FIGURES

Figure		Page
3-1.	Front Panel Indicators .....	3-1
3-2.	Rear Panel Controls and Connectors .....	3-2
4-1.	Eight-bit Serial-in Parallel-out Shift Register, 1820-0294 .....	4-1
4-2.	Read-only memory, 1816-0257 .....	4-2
4-3.	Functional Block Diagram .....	4-2
6-1.	Cabinet Parts .....	6-6
7-1.	Parallel Output Board Assembly A1 (Series 1316A) Component Locator .....	7-2
8-1.	Schematic Diagram Notes .....	8-2
8-2.	Digital Bus Connector Pin Designations .....	8-3
8-3.	59301A Schematic Diagram .....	8-5

## LIST OF TABLES

1-1.	Equipment Supplied .....	1-1
1-2.	Specifications .....	1-2
3-1.	Printer Format Codes .....	3-3
3-2.	Hexadecimal Format Codes .....	3-3
3-3.	Special Action Codes .....	3-4
3-4.	59301A Programming Example .....	3-4
5-1.	Recommended Test Equipment .....	5-1
5-2.	In-cabinet Performance Check .....	5-2
5-3.	Trouble Isolation .....	5-4
5-4.	Performance Check Test Card .....	5-7
6-1.	Replaceable Parts, 59301A ASCII to Parallel Converter .....	6-3
6-2.	59301A Cabinet Parts .....	6-5
6-3.	Manufacturers Code List .....	6-5



## SECTION I

### GENERAL INFORMATION

#### 1-1. INTRODUCTION

1-2. This section provides general information on the Hewlett-Packard Model 59301A ASCII To Parallel Converter including an overall instrument description, equipment supplied, and instrument specifications.

#### 1-3. DESCRIPTION

1-4. The HP 59301A ASCII/Parallel Converter accepts byte-serial ASCII characters on the HP Interface Bus and converts them to parallel output. A rear panel switch selects the output format in either print or hexadecimal form. The print format provides print wheel characters belonging to the set used by the HP 5050B/5050A Printers.

#### 1-5. INSTRUMENT IDENTIFICATION

1-6. Each Hewlett-Packard instrument has a ten-character serial number (e.g., 0000A00000). The four-digit serial prefix identifies a group of identical instruments, and the five-digit suffix is a serial number unique to each instrument. If the serial prefix of your instrument differs from that listed on the title page of this manual, your instrument is different from this manual. For instruments with higher serial prefixes, a manual change sheet is included with this manual. If the manual change sheet is missing, request one from the nearest Hewlett-Packard Sales and Service office listed at the back of this manual. For instruments with lower serial prefixes, refer to the backdating information in Section VII.

#### 1-7. EQUIPMENT SUPPLIED

1-8. Table 1-1 lists the equipment supplied with the 59301A.

Table 1-1. Equipment Supplied

Description	HP Part Number
Detachable Power Cord, 7½ ft. (231 cm) long	8120-1378
HP Interface Bus Interconnect Cable	10631A

#### 1-9. SPECIFICATIONS

1-10. Specifications for the Hewlett-Packard Model 59301A ASCII to Parallel Converter are given in Table 1-2.

Table 1-2. Specifications

## **ELECTRICAL**

### **Parallel Outputs:**

Logic 0 = 0 to .4V (7 mA sink)

Logic 1 = 5V (40  $\mu$ A source at 2.4V)

Order outputted. Column 1 contains last serial character received by 59301.

Column 2 contains next to last character, etc.

### **Print Command (J1 only):**

Negative step +5V to +0.4V for minimum of 20  $\mu$ s.

### **Inhibit Command Input (J1 only):**

Voltage level within the range from +2.4V to +20V into 5K ohm; must be applied within 20  $\mu$ s after the negative transition of the print command.

### **Reference Voltages (output on both J1 and J2):**

High = 5V, 20 mA

Low = 0V

## **DIMENSIONS**

**Height:** 4 inches (101, 6mm)

**Width:** 8.38 inches (212, 9 mm)

**Depth:** 11.4 inches (289, 6 mm)

**Weight:** 3 lb., 12 oz. (1, 70 kg)



## SECTION II

### INSTALLATION

#### 2-1. INTRODUCTION

2-2. This section contains information for unpacking, inspection, repacking, storage, and installation.

#### 2-3. UNPACKING AND INSPECTION

2-4. If the shipping carton is damaged, ask that the carrier's agent be present when the instrument is unpacked. Inspect the instrument for damage. If the instrument is damaged or fails to meet electrical specifications, notify the carrier and the nearest Hewlett-Packard Sales and Service office immediately (offices are listed at the back of this manual). Retain the shipping carton and padding material for the carrier's inspection. The Sales and Service office will arrange for the repair or replacement of your instrument without waiting for the claim against the carrier to be settled.

#### 2-5. STORAGE AND SHIPMENT

2-6. To protect the ASCII to Parallel Converter during storage or shipment, good commercial packing methods should be used. Reliable commercial packing and shipping companies have the facilities and materials to adequately repack an instrument.

#### NOTE

Before returning an instrument to Hewlett-Packard, contact the nearest Hewlett-Packard Sales and Service office for instructions.

2-7. Conditions during storage and shipment should normally be limited as follows:

- a. Maximum altitude: 25,000 feet.
- b. Minimum temperature:  $-40^{\circ}\text{F}$  ( $-40^{\circ}\text{C}$ ).
- c. Maximum temperature:  $+167^{\circ}\text{F}$  ( $+75^{\circ}\text{C}$ ).

#### 2-8. POWER REQUIREMENTS

2-9. The ASCII to Parallel Converter operates from either 115 or 230 volts, 50 Hz to 60 Hz AC. Before applying power, the screwdriver-operated switch on the rear panel must be set to the correct position (115 or 230) and the correct fuse (as labeled on the rear panel) must be installed.





## SECTION III


### OPERATION AND PROGRAMMING

#### 3-1. INTRODUCTION

3-2. This section contains operating information including controls and indicators, programming, and programming examples.


#### 3-3. CONTROLS, INDICATORS, AND CONNECTORS

3-4. Figure 3-1 identifies and describes the front panel indicators. Figure 3-2 shows the rear panel connectors and controls.

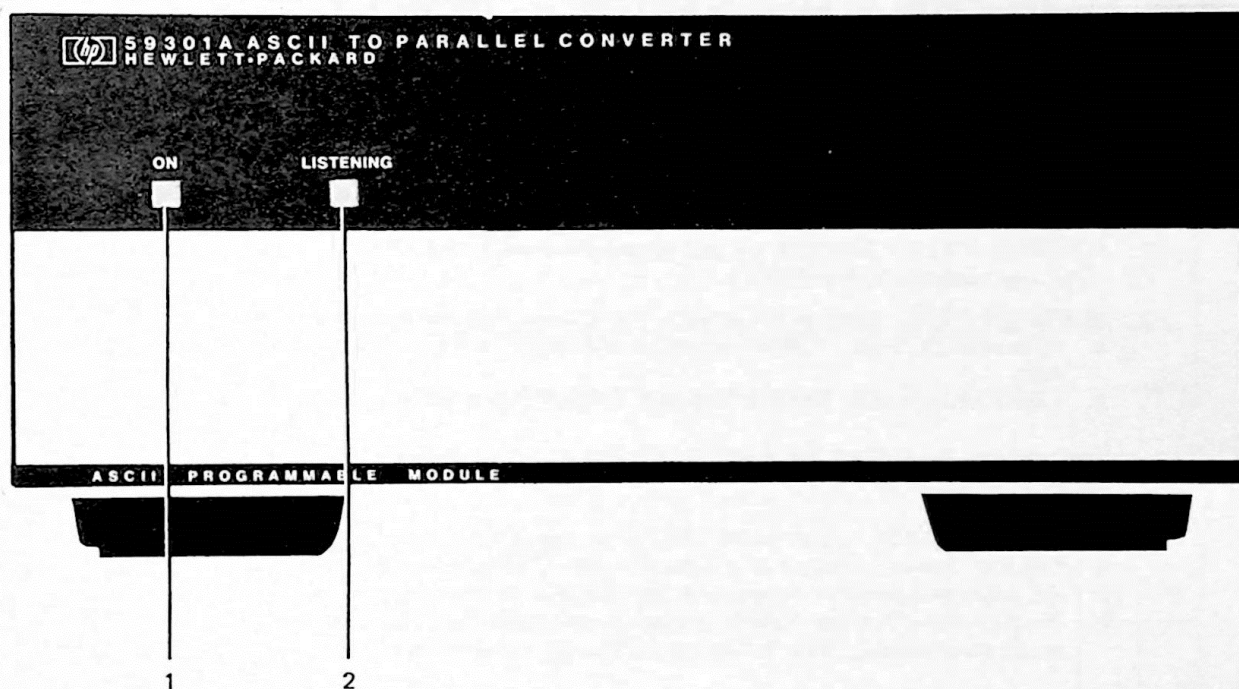

1. ON indicator: When illuminated, indicates instrument has primary power applied and power supply is operating.
2. LISTENING indicator: When illuminated, indicates instrument is addressed and monitoring the Interface Bus.

Figure 3-1. Front Panel Indicators

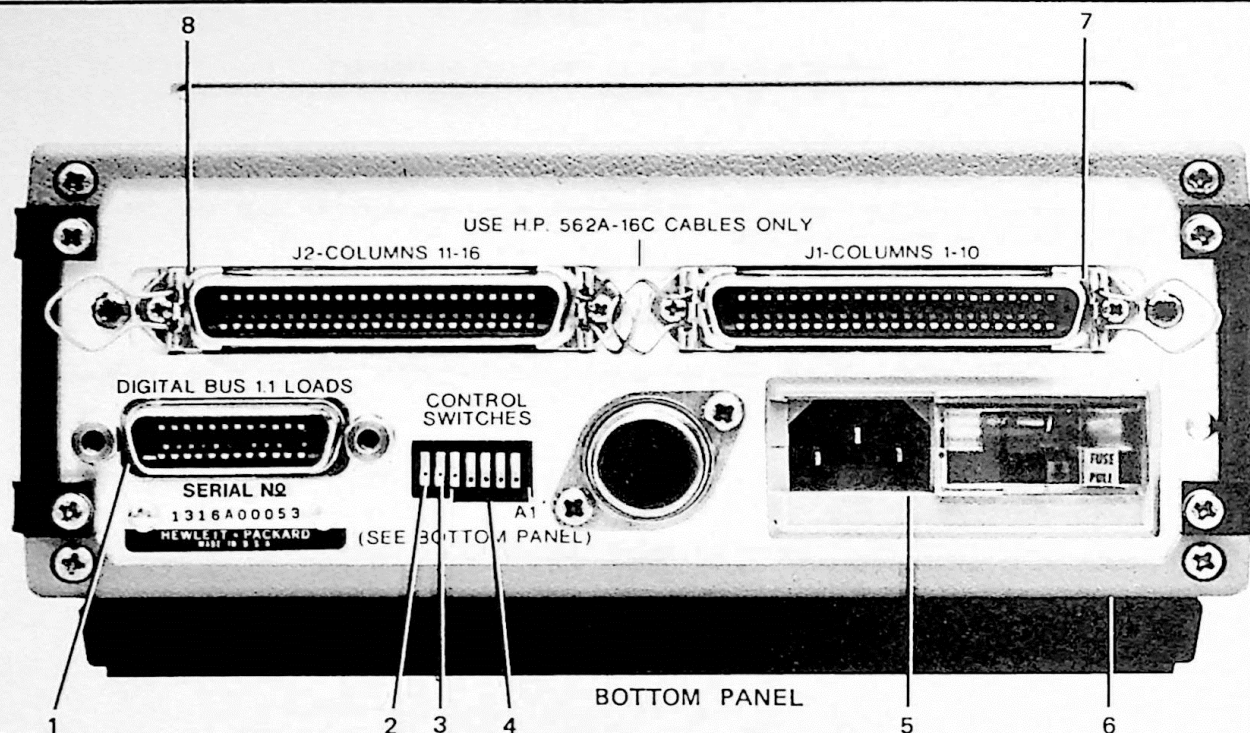

1. **DIGITAL BUS 1.1 LOADS:** 24 pin connector used to convey data and programming instructions to the 59301A.
2. **MODE SWITCH:** Used to set unit in one of two programming response modes.
  - a. **Addressable mode:** 59301A must be addressed in order to respond to input data.
  - b. **Listen only mode:** 59301A responds to data input without address input.

Instructions for setting the mode switch are given on the decal indicated on the bottom panel (see 6).
3. **FORMAT SWITCH:** Used to set 59301A in one of two operating formats.
  - a. **Printer Format:** 59301A converts the ASCII characters 0-9, +, -, . only. All other characters are ignored. (See Table 3-1 for exact output code.)
  - b. **Hexadecimal Format:** 59301 converts most ASCII characters into negative true hexadecimal. (See Table 3-2 for exact conversions.)
4. **ADDRESS SWITCHES (last five switches):** These switches are used to assign an address code to the 59301A. Allowable codes and their ASCII equivalents are identified on the decal on the bottom panel. (See 6.)
5. **AC POWER MODULE:** Input power module consisting of an I.E.C. approved connector, a fuse, (.3 Amp 115 Vac, .15 Amp 230 Vac), and a 115/230 line voltage switch and filter capacitors. Design of module prevents fuse or switch change when ac power line is connected. The switch cannot be changed unless the fuse is removed.
6. **DECAL (bottom cover):** This decal contains instructions for setting the mode switch, format switch, and address switches as well as part of the ASCII to Printer and Hexadecimal conversion format tables.
7. **J1-COLUMNS 1-10:** 50-pin connector for digital recorder interconnection.
8. **J2-COLUMNS 11-16:** 50-pin connector for digital recorder interconnection.

Figure 3-2. Rear Panel Controls and Connectors



### 3-5. PROGRAMMING

3-6. The 59301A operates in response to a specific set of programming codes. The ASCII codes used in the Printer Format mode of operation are shown in Table 3-1. The codes used in the Hexadecimal Format are shown in Table 3-2. A sample program for the 59301A illustrating the use of these codes is depicted in Table 3-4.

3-7. **SPECIAL ACTION CODES.** The 59301A has a set of special codes that it will respond to. The codes are of two forms, codes present when MRE is high (i.e.  $\geq +2.4V$ ) and codes present when MRE is low (i.e.  $\leq +.5V$ ). Table 3-3 lists these codes and the response of the 59301A.

Table 3-1. Printer Format Codes

Input ASCII	Output				Printed Character (Standard Print Wheel) 5050A/B and 5055A
	b <sub>3</sub>	b <sub>2</sub>	b <sub>1</sub>	b <sub>0</sub>	
0	0	0	0	0	0
1	0	0	0	1	1
2	0	0	1	0	2
3	0	0	1	1	3
4	0	1	0	0	4
5	0	1	0	1	5
6	0	1	1	0	6
7	0	1	1	1	7
8	1	0	0	0	8
9	1	0	0	1	9
+	1	0	1	0	+
-	1	0	1	1	-
(DP)	1	1	1	1	*
All other input codes ignored.					

Table 3-2. Hexadecimal Format Codes

Input		Output			
ASCII	(Alternate)	b <sub>3</sub>	b <sub>2</sub>	b <sub>1</sub>	b <sub>0</sub>
0	/	1	1	1	1
1	.	1	1	1	0
2	]	1	1	0	1
3	,	1	1	0	0
4	[	1	0	1	1
5	*	1	0	1	0
6	)	1	0	0	1
7	(	1	0	0	0
8	'	0	1	1	1
9	&	0	1	1	0
A	:	0	1	0	1
B	;	0	1	0	0
C	<	0	0	1	1
D	=	0	0	1	0
E	>	0	0	0	1
F	?	0	0	0	0
	SP				
	P				
	G				
	@				
	O				
	N				
	M				
	U				
	T				
	S				
	R				
	Q				
	H				
	I				
	J				
	K				
	L				
	Z				
	Y				
	X				
	W				
	V				
	%				
	\$				
	#				
	"				
	!				
	SP				

Table 3-3. Special Action Codes

Name	MRE	DIO Lines								ASCII Equiv.	59301 Response
		8	7	6	5	4	3	2	1		
Unlisten	1	X	0	1	1	1	1	1	1	?	Unit responds by not converting any characters until it again receives its address mode.
Address Code	1	X	0	1	A <sub>5</sub> *	A <sub>4</sub> *	A <sub>3</sub> *	A <sub>2</sub> *	A <sub>1</sub> *		Unit responds by converting characters on DIO lines when MRE = 0.
Line feed	0	X	0	0	0	1	0	1	0	LF	Unit outputs negative print command at J1 indicating it is ready to output its parallel information.

\*A<sub>5</sub> – A<sub>1</sub> must match code set on address switch. X = don't care (can be 1 or 0).

Table 3-4. 59301A Programming Example

Sequence	Control Lines		Data Lines ASCII Codes	Description of Program Sequence
	EOP	MRE		
1	H	L	?	Clears all listeners
2	H	L	1	Listen address- must correspond to rear panel switch settings
3	H	H		59301A ready for data  Data is on data lines—refer to Tables 3-1 and 3-2 for allowable codes.
4	H	H	LF	Indicates end of serial data string (16 maximum) 59301A outputs print command
5	H	H		Repeat steps 3 and 4.



## SECTION IV THEORY OF OPERATION

### 4-1. INTRODUCTION

4-2. This section contains integrated circuit operation and a description of the 59301A functional block diagram.

### 4-3. INTEGRATED CIRCUIT OPERATION

#### 4-4. Eight-bit Serial-in Parallel-out Shift Register, 1820-0294

4-5. This IC (Figure 4-1) accepts serial input data and provides parallel outputs. The unit consists of eight RS flip-flops connected in a shift register configuration. Clocking occurs on the positive going edge of the clock pulse. Input gates are provided for the RS inputs to allow for strobe capability. Logic 1 levels at the data terminals enter logical "1's" into the shift register. When the clear input (pin 9) is driven low, all flip-flops are asynchronously set to the logical 0 state.

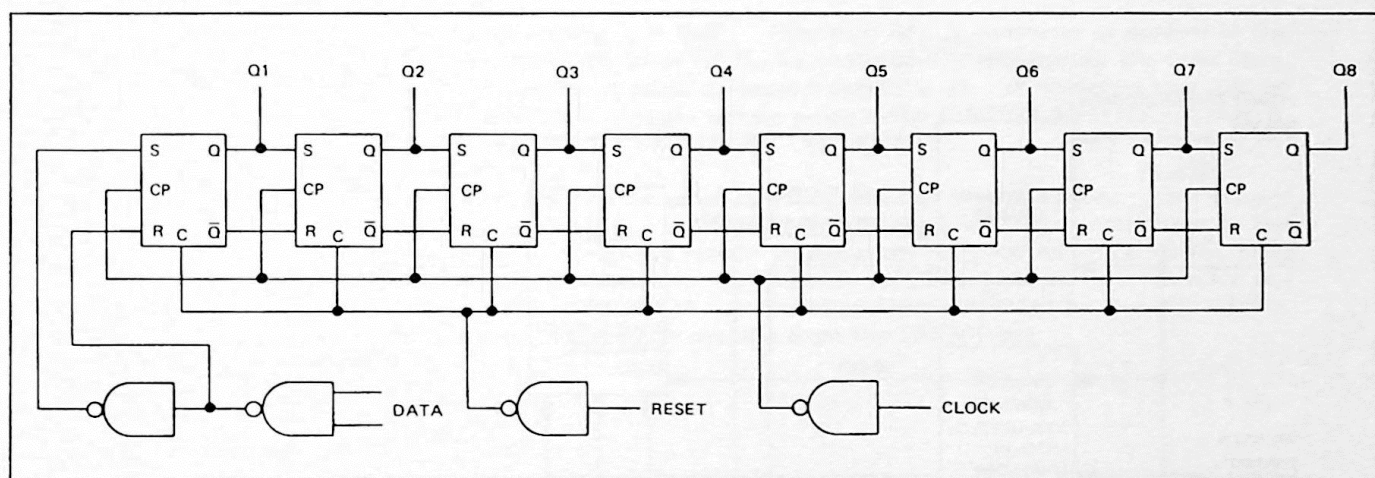


Figure 4-1. Eight-bit Serial-in Parallel-out Shift Register, 1820-0294

#### 4-6. 1024-bit Read-only-memory, 1816-0257

4-7. The Read-only-memory (ROM) illustrated in Figure 4-2 is a 1024-bit ROM whose output is organized into 256 words by four bits. An 8-bit code is used to select the desired output word. The four outputs are open-collector which permit "OR" tying of the outputs to the same line. Logic lows are required at inputs CS1 and CS2 to activate the ROM.

### 4-8. FUNCTIONAL BLOCK DIAGRAM DESCRIPTION

4-9. Figure 4-3 illustrates the functional block diagram for the 59301A ASCII to Parallel Converter. The 59301A consists of five major circuit groups: BUS CONTROL, DECODER, PRINTER CONTROL, TIMING AND RESET, and SERIAL TO PARALLEL CONVERTER.

4-10. The three wire handshake input/output (RFD, DAV, and DAC) to the BUS CONTROL synchronizes all operations occurring in the ASCII to Parallel Converter. During the address mode, for example, the system controller drives the MRE line low, indicating the address mode to the 59301. After the ASCII to Parallel Converter indicates it is ready for data by setting RFD high,

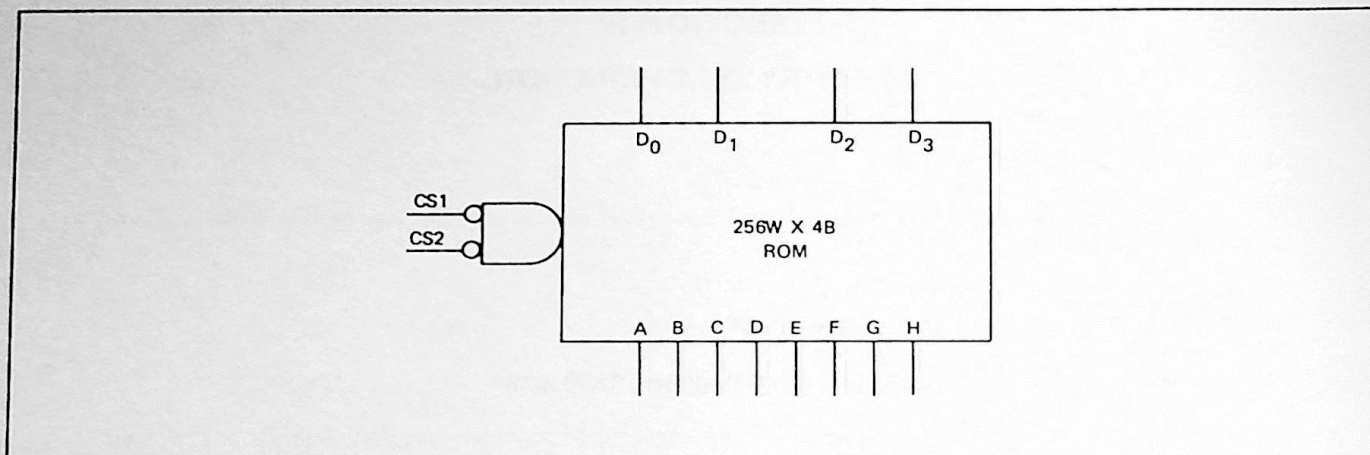


Figure 4-2. Read-only-memory, 1816-0257

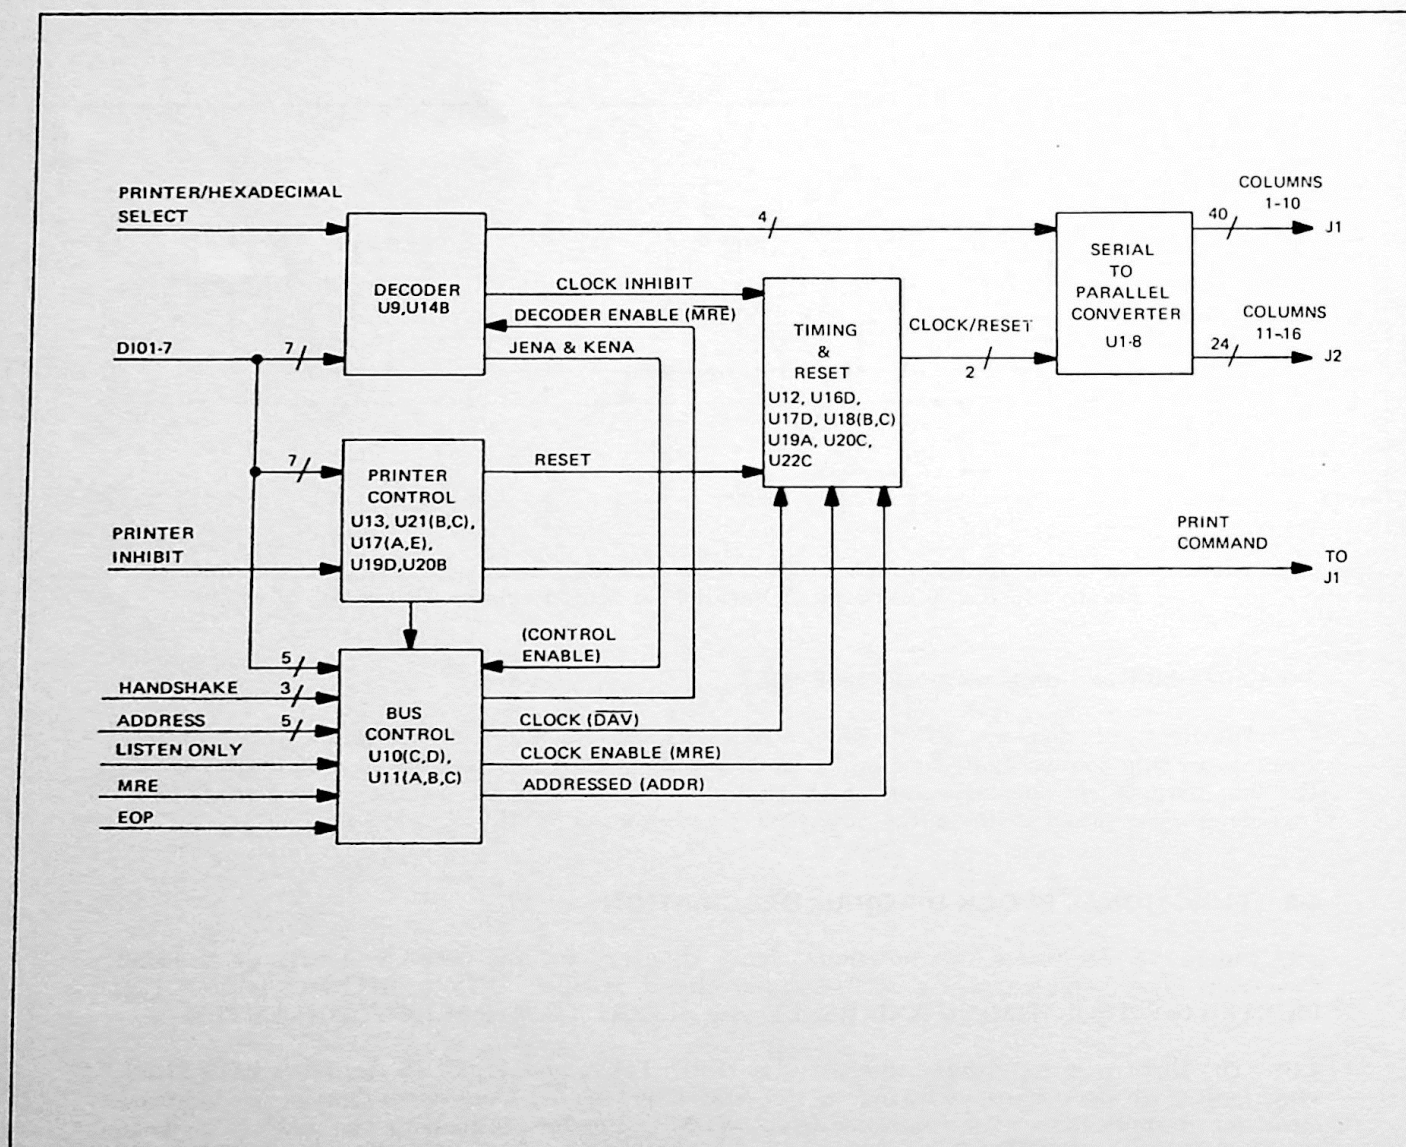


Figure 4-3. Functional Block Diagram



the system controller applies an address to the data lines (DIO1-DIO7). If the address is a listen address, the DECODER will enable the BUS CONTROL. When enabled, the BUS CONTROL compares the input address with the five wire address input from the rear panel mounted CONTROL SWITCHES. If the two inputs are the same, a clock enable is applied to the TIMING AND RESET when the system controller sets DAV (Data Valid) low. After the 59301 has accepted the input data, the DAC (Data Accepted) line is set high, allowing the process to repeat. Each step of the handshake cycle must be completed before the cycle can proceed to the next step.

4-11. The clock enable output from the BUS CONTROL allows the TIMING AND RESET to clock data into the SERIAL TO PARALLEL CONVERTER during the data mode. The TIMING AND RESET is also enabled when Listen Only (part of the CONTROL SWITCHES) is high. When enabled, the TIMING AND RESET produces a clock output whenever the DAV line is set low. The DAV line set low results in a clock ( $\overline{\text{DAV}}$ ) output from the BUS CONTROL. The TIMING AND RESET does not generate a clock output during the address mode because the clock ( $\overline{\text{DAV}}$ ) output from the BUS CONTROL is inhibited when MRE is low.

4-12. During the data mode, the MRE line is high which enables the clock ( $\overline{\text{DAV}}$ ) output to the TIMING AND RESET. When the RFD line is set high by the 59301A, the bus talker applies data to the bus data lines. The DECODER converts the 7-bit ASCII input to a 4-bit output to the SERIAL TO PARALLEL CONVERTER. This data is strobed into the SERIAL TO PARALLEL CONVERTER by the TIMING AND RESET when the DAV line goes low. The 59301A indicates it has accepted the data by setting DAC high, allowing the cycle to repeat.

4-13. At the end of a serial data string, a (LF) (linefeed) ASCII character is applied to the data lines by the talker. The PRINTER CONTROL, by continuously monitoring the data lines, senses the (LF) input and applies a print command output to J1. In response to a printer inhibit input, the PRINTER CONTROL outputs a reset pulse to the TIMING AND RESET which, in turn, applies a reset to the SERIAL TO PARALLEL CONVERTER.

4-14. The 59301A accepts any ASCII character specified by the chosen format. The printer format converts only ASCII 0 through 9, +, -, and . Any other ASCII character input to the 59301A during the printer mode of operation results in an inhibit applied to the TIMING AND RESET. The hexadecimal format responds to all printable ASCII inputs and provides for the manipulation of all four bits on each of the 16 parallel characters outputted by the DECODER. The printer format is restricted to 13 character outputs from the DECODER.





## SECTION V MAINTENANCE

### 5-1. INTRODUCTION

5-2. This section contains maintenance and service information including a table of recommended test equipment, an in-cabinet performance check, and troubleshooting.

### 5-3. TEST EQUIPMENT

5-4. Table 5-1 lists test equipment recommended for maintaining and checking the performance of the 59301A. Test equipment having equivalent characteristics may be substituted for the equipment listed.

### 5-5. IN-CABINET PERFORMANCE CHECK

5-6. Table 5-2 contains the in-cabinet performance check. An HP Interface Bus controller, as defined in the HP Interface Bus User's Manual, is required to provide signal inputs to the 59301A. If a controller is not available, an HP Interface Bus talker, as defined in the HP Interface Bus User's Manual, can be used. However, a talker cannot check the addressable mode of the 59301A.

5-7. The HP 5050B Digital Recorder should be used to monitor the signal output of the 59301A if worst case loading is expected. If worst case loading is not expected, the HP 5050A Digital Recorder or an equivalent TTL monitoring device can be used.


#### NOTE

The HP 5050B should not have options 003, 50/51, 60/61, and zero suppression must be defeated.

Table 5-1. Recommended Test Equipment

Instrument	Required Characteristics	Recommended
Logic Probe	Logic State Tests	HP 10525T
Logic Pulser	Logic State Tests	HP 10526T
Digital Voltmeter	0 to +175 volts, Accuracy .3%	HP 3480A and 3482A
Digital Recorder	Monitor and display of Printer and Hexadecimal Format (TTL levels)	HP 5050B

Table 5-2. In-cabinet Performance Check

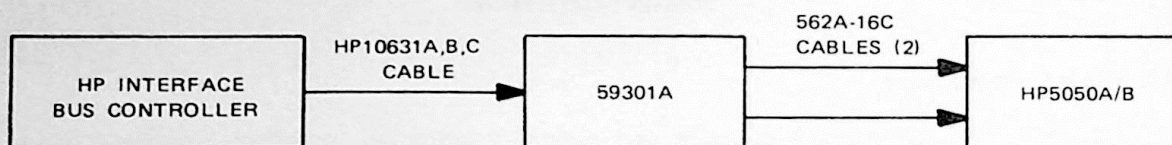

1. On rear panel of 59301A, set voltage selector switch in the AC power module to correspond with line voltage to be used (115V or 230V). Install correct line fuse and connect 59301A to power source. The ON light should illuminate.
2. Connect equipment as illustrated in the above diagram.
3. ADDRESSABLE MODE CHECK
  - a. On 59301A rear panel, set mode switch to the addressable position.
  - b. Set the 59301A rear panel address switches to the following code:

A <sub>5</sub>	A <sub>4</sub>	A <sub>3</sub>	A <sub>2</sub>	A <sub>1</sub>	ASCII Equivalent
0	0	0	0	0	SP

- c. Program the Bus controller to apply the above ASCII code to the Bus data lines. Check that 59301A LISTENING indicator illuminates.
- d. Program the Bus controller to apply the Unlisten Code to the Bus data lines. Check that 59301A LISTENING indicator extinguishes.

A <sub>7</sub>	A <sub>6</sub>	A <sub>5</sub>	A <sub>4</sub>	A <sub>3</sub>	A <sub>2</sub>	A <sub>1</sub>	ASCII Equivalent
1	1	1	1	1	1	1	?

- e. Repeat steps b thru d for the following codes:

A <sub>5</sub>	A <sub>4</sub>	A <sub>3</sub>	A <sub>2</sub>	A <sub>1</sub>	ASCII Equivalent
0	0	0	0	1	!
0	0	0	1	1	#
0	0	1	1	1	,
0	1	1	1	1	/
1	1	1	1	0	>



Table 5-2. In-cabinet Performance Check (Cont'd)

4. EOP CHECK

- a. Program the Bus controller to apply the 59301A listen address to the Bus data lines. Check that 59301A LISTENING indicator illuminates.
- b. Program the Bus controller to set the EOP Bus signal line low. Check that 59301A LISTENING indicator extinguishes.
- c. Program the Bus controller to set the EOP Bus signal line back to high. Check that 59301A LISTENING indicator remains extinguished.

5. LISTEN ONLY MODE

- a. Set the 59301A mode switch to the listen only position. Check that 59301A LISTENING indicator illuminates.
- b. Apply the unlisten code to the Bus data lines. The 59301A LISTENING indicator should remain illuminated.
- c. Pull the EOP Bus signal line low and then back high. The 59301A LISTENING indicator should remain illuminated in both cases.

6. FORMAT SWITCH CHECK

- a. Set the 59301A mode switch to the addressable position.
- b. Set the 59301A format switch to the printer format position.
- c. As shown in Table 3-4, apply an address and data information (acceptable data codes are listed in Table 3-1) to the 59301A. Check for the following:
  1. The 59301A properly converts the ASCII inputs. Any other ASCII inputs not listed in Table 3-1 should not be converted.
  2. Outputs sixteen columns at a time.
  3. 59301 responds to positive (+) inhibit (does not present new information or take away old information before printer is ready).
  4. 59301 presents negative (-) print command (i.e., printer is printing).
  5. 59301 outputs information and negative (-) print command each time ASCII LF is applied to the data lines.
- d. On 59301A rear panel, set format switch to hexadecimal position.
- e. Repeat step c. for hexadecimal codes. Acceptable data codes for the hexadecimal format are contained in Table 3-2.

5-8. TROUBLESHOOTING

5-9. To facilitate troubleshooting the 59301A, refer to Table 5-3, Trouble Isolation. Table 5-3 gives the signals present on test points at J4 on the front edge of the board when the unit is properly functioning. See Figure 8-3 for location of test points on schematic diagram and component locator.

Table 5-3. Trouble Isolation

J4 Test Point Number	Test Point Name	Tests
1	ROM ENABLE	High when DIO 6 & 7 are not alike, otherwise low.
2	LF DETECTOR ENABLE	(MRE STROBE ADDRESSED). TP2 will go high whenever MRE & STROBE & LISTEN F/F are all high.
3	PRINTER MODE SUPPRESSION	Output is high whenever ROM output code is 1110 and 59301 is in printer mode. Output is low for all other ROM codes or when 59301 is in hexadecimal mode.
4	HANDSHAKE ENABLE	Will be high if MRE = 1 or unit is addressed to listen or Mode Switch is in Listen Only mode. High enables RFD & DAC drivers.
5	POWER-UP RESET	Low at turn-on, takes approximately 600 ms to charge up to TTL high.
6	"A" BIT OF OUTPUT DATA	State depends on character that is converted. See conversion tables in Section III for more information.
7	CLOCK FOR HANDSHAKE	Output of Strobe One-shot, used to clock Handshake F/F. Pulses to TTL low.
8	"D" BIT OF OUTPUT DATA	State depends on character that is converted and format of output. See conversion tables in Section III for more information.
9	LF DETECTOR	Low when linefeed is present on DIO lines and TP2 is high.
10	"C" BIT OF OUTPUT DATA	State depends on character that is converted and format of output. See conversion tables in Section III for more information.
11	"B" BIT OF OUTPUT DATA	State depends on character that is converted and format of output. See conversion tables in Section III for more information.
12	DAV-POWER-UP RESET	Once TP5 is high, the state of this point will be the opposite of DAV line, i.e., TP12 + DAV.
13	OUTPUT OF HANDSHAKE F/F	Low after each TP7 pulse, high after each TP12 pulse.
14	CLOCK PULSE TO SHIFT REGISTERS	Pulses to TTL low at same time as TP-2 when TP-1 and TP-3 are high. Low if TP-1, 2, or 3 is low.
15	CLEAR ONE SHOT OUTPUT	Pulses to TTL high, and clears all information in output registers. Once TP5 is high triggered by + Inhibit line going low. This one-shot is trailing edge triggered.
16	ADDRESS COMP. OUTPUT	Low when $A_1 - A_5$ and DIO 1 - 5 are in like states. High at all other times.
17	+INHIBIT LINE	High when + Inhibit from printer is low and visa versa.



Table 5-3. Trouble Isolation (Cont'd)

J4 Test Point Number	Test Point Name	Tests
18	CLOCK FOR LISTEN F/F	(MRE · STROBE) Pulse high when MRE = 1. Otherwise low.
19	5V and HREF	+5V
20	5V and HREF	+5V
21	GROUND and LREF	0V
22	GROUND and LREF	0V





Table 5-4. Performance Check Test Card

Hewlett-Packard Model 59301A		Test Performed by _____
Instrument Serial No. _____		Date _____
1. Unit responds properly to all addresses.	_____	
2. LISTENING indicator goes out when EOP goes low	_____	
3. Unit performs properly in Listen Only mode.	_____	
4. Unit performs properly in Printer Format mode.	_____	
5. Unit performs properly in Hexadecimal Format mode.	_____	





## SECTION VI

### REPLACEABLE PARTS

#### 6-1. INTRODUCTION

6-2. This section contains information for ordering replaceable parts. Table 6-1 lists replaceable parts for the ASCII to Parallel Converter. Table 6-2 lists the mechanical parts. Figure 6-1 identifies the cabinet parts. Table 6-3 contains a list of manufacturers and their respective codes.

6-3. Parts are listed in alpha-numerical order of their reference designator starting with A1 and ending with chassis and miscellaneous parts. The replaceable parts table includes the following information.

- Reference designator (when applicable).
- HP part number.
- Total quantity (Qty) used in the instrument.
- Description of the part (see abbreviations below).

#### 6-4. ORDERING INFORMATION

6-5. To obtain replacement parts, address order of inquiry to your local Hewlett-Packard Sales and Service Office. Identify parts by their Hewlett-Packard part number.

6-6. To obtain a part that is not listed, include:

- Instrument model number.
- Instrument serial number.
- Description of the part.
- Function and location of the part.

#### REFERENCE DESIGNATIONS

A	= assembly	E	= miscellaneous electrical part	P	= electrical connector (movable portion); plug	U	= integrated circuit; microcircuit
AT	= attenuator; isolator; termination	F	= fuse	Q	= transistor; SCR; triode thyristor	V	= electron tube
B	= fan; motor	FL	= filter	R	= resistor	VR	= voltage regulator; breakdown diode
BT	= battery	H	= hardware	RT	= thermistor	W	= cable; transmission path; wire
C	= capacitor	HY	= circulator	S	= switch	X	= socket
CP	= coupler	J	= electrical connector (stationary portion); jack	T	= transformer	Y	= crystal unit-piezoelectric
CR	= diode; diode thyristor; varactor	K	= relay	TB	= terminal board	Z	= tuned cavity; tuned circuit
DC	= directional coupler	L	= coil; inductor	TC	= thermocouple		
DL	= delay line	M	= meter	TP	= test point		
DS	= annunciator; signaling device (audible or visual); lamp.	MP	= miscellaneous mechanical part				
LED							

#### ABBREVIATIONS

A	= ampere	avg	= average	CHAN	= channel	dc	= direct current
ac	= alternating current	AWG	= American wire gauge	cm	= centimeter	deg	= degree (temperature interval or difference)
ACCESS	= accessory	BAL	= balance	CMO	= cabinet mount only	°	= degree (plane angle)
ADJ	= adjustment	BCD	= binary coded decimal	COAX	= coaxial	°C	= degree Celsius (centigrade)
A/D	= analog-to-digital	BD	= board	COEF	= coefficient	°F	= degree Fahrenheit
AF	= audio frequency	BE CU	= beryllium copper	COM	= common	°K	= degree Kelvin
AFC	= automatic frequency control	BFO	= beat frequency oscillator	COMPL	= complete	DEPC	= deposited carbon
AGC	= automatic gain control	BH	= binder head	CONN	= connector	DET	= detector
AL	= aluminum	BKDN	= breakdown	CP	= cadmium plate	diam	= diameter
ALC	= automatic level control	BP	= bandpass	CRT	= cathode-ray tube	DIA	= diameter (used in parts list)
AM	= amplitude modulation	BPF	= bandpass filter	CTL	= complementary transistor logic	DIFF	= differential amplifier
AMPL	= amplifier	BRS	= brass	CW	= continuous wave	div	= division
APC	= automatic phase control	BWO	= backward-wave oscillator	cw	= clockwise	DPDT	= double-pole, double-throw
ASSY	= assembly	CAL	= calibrate	cm	= centimeter	DR	= drive
AUX	= auxiliary	ccw	= counterclockwise	D/A	= digital-to-analog		
		CER	= ceramic	dB	= decibel		
				dBm	= decibel referred to 1 mW		

## ABBREVIATIONS

DSB	= double sideband	MFR	= manufacturer	PIV	= peak inverse voltage	TFT	= thin-film transistor
DTL	= diode transistor logic	mg	= milligram	pk	= peak	TGL	= toggle
DVM	= digital voltmeter	MHz	= megahertz	PL	= phase lock	THD	= thread
ECL	= emitter coupled logic	mH	= millihenry	PLO	= phase lock oscillator	THRU	= through
EMF	= electromotive force	mho	= mho	PM	= phase modulation	TI	= titanium
EDP	= electronic data processing	MIN	= minimum	PNP	= positive-negative-positive	TOL	= tolerance
ELECT	= electrolytic	min	= minute (time)	P/O	= part of	TRIM	= trimmer
ENCAP	= encapsulated	MINAT	= miniature	POLY	= polystyrene	TSTR	= transistor
EXT	= external	mm	= millimeter	PORC	= porcelain	TTL	= transistor-transistor logic
F	= farad	MOD	= modulator	POS	= positive; position(s) (used in parts list)	TV	= television
FET	= field-effect transistor	MOM	= momentary	POSN	= position	TVI	= television interference
F/F	= flip-flop	MOS	= metal-oxide semiconductor	POT	= potentiometer	TWT	= traveling wave tube
FH	= flat head	ms	= millisecond	p-p	= peak-to-peak	U	= micro (10 <sup>-6</sup> ) (used in parts list)
FIL. H	= fillister head	MTG	= mounting	PP	= peak-to-peak (used in parts list)	UF	= microfarad (used in parts list)
FM	= frequency modulation	MTR	= meter (indicating device)	PPM	= pulse-position modulation	UHF	= ultrahigh frequency
FP	= front panel	mV	= millivolt	PREAMPL.	= preamplifier	UNREG	= unregulated
FREQ	= frequency	mVac	= millivolt, ac	PRF	= pulse-repetition frequency	V	= volt
FXD	= fixed	mVdc	= millivolt, dc	PRR	= pulse repetition rate	VA	= voltampere
g	= gram	mVpk	= millivolt, peak	ps	= picosecond	Vac	= volts, ac
GE	= germanium	mV p-p	= millivolt, peak-to-peak	PT	= point	VAR	= variable
GHz	= gigahertz	mVrms	= millivolt, rms	PTM	= pulse-time modulation	VCO	= voltage-controlled oscillator
GL	= glass	mW	= milliwatt	PWM	= pulse-width modulation	Vdc	= volts, dc
GND	= ground(ed)	MUX	= multiplex	PWV	= peak working voltage	VDCW	= volts, dc, working (used in parts list)
H	= henry	MY	= mylar	RC	= resistance	V(F)	= volts, filtered
h	= hour	μA	= microampere	RECT	= rectifier	VFO	= variable-frequency oscillator
HET	= heterodyne	μF	= microfarad	REF	= reference	VHF	= very-high frequency
HEX	= hexagonal	μH	= microhenry	REG	= regulated	Vpk	= volts, peak
HD	= head	μmho	= micromho	REPL.	= replaceable	Vp-p	= volts, peak-to-peak
HDW	= hardware	μs	= microsecond	RF	= radio frequency	Vrms	= volts, rms
HF	= high frequency	μV	= microvolt	RFI	= radio frequency interference	VSWR	= voltage standing wave ratio
HG	= mercury	μVac	= microvolt, ac	RH	= round head, right hand	VTO	= voltage-tuned oscillator
HI	= high	μVdc	= microvolt, dc	Ri.C	= resistance-inductance-capacitance	VTVM	= vacuum-tube voltmeter
HP	= Hewlett-Packard	μVpk	= microvolt, peak	RMO	= rack mount only	V(X)	= volts, switched
HPF	= high pass filter	μV p-p	= microvolt, peak-to-peak	rms	= root-mean-square	W	= watt
HR	= hour (used in parts list)	μVrms	= microvolt, rms	RND	= round	W/	= with
HV	= high voltage	μW	= microwatt	ROM	= read-only memory	WIV	= working inverse voltage
H <sub>z</sub>	= Hertz	nA	= nanoampere	R&P	= rack and panel	WW	= wirewound
IC	= integrated circuit	NC	= no connection	RWV	= reverse working voltage	W/O	= without
ID	= inside diameter	N/C	= normally closed	S	= scattering parameter	YIG	= yttrium-iron-garnet
IF	= intermediate frequency	NE	= neon	S-B	= second (time)	Zo	= characteristic impedance
IMPG	= impregnated	NEG	= negative	SCR	= silicon controlled rectifier, screw		
in	= inch	nF	= nanofarad	SE	= selenium		
INCD	= incandescent	NI PL	= nickel plate	SECT	= sections		
INCL.	= include(s)	N/O	= normally open	SEMICON	= semiconductor		
INP	= input	NOM	= nominal	SHF	= superhigh frequency		
INS	= insulation	NORM	= normal	SI	= silicon		
INT	= internal	NPN	= negative-positive-negative	SIL	= silver		
kg	= kilogram	NPO	= negative-positive zero (zero temperature coefficient)	SL	= slide		
kHz	= kilohertz	NRFR	= not recommended for field replacement	SNR	= signal-to-noise ratio		
kΩ	= kilohm	NSR	= not separately replaceable	SPDT	= single-pole, double-throw		
kV	= kilovolt	ns	= nanosecond	SPG	= spring		
lb	= pound	nW	= nanowatt	SR	= split ring		
LC	= inductance-capacitance	OBD	= order by description	SPST	= single-pole, single-throw		
LED	= light-emitting diode	OD	= outside diameter	SSB	= single sideband		
LF	= low frequency	OH	= oval head	SST	= stainless steel		
LG	= long	OP AMPL.	= operational amplifier	STL	= steel		
LH	= left hand	OPT	= option	SQ	= square		
LJM	= limit	OSC	= oscillator	SWR	= standing-wave ratio		
LJN	= linear taper (used in parts list)	OX	= oxide	SYNC	= synchronize		
lin	= linear	oz	= ounce	T	= timed (slow-blow fuse)		
LK	= lock washer	Ω	= ohm	TA	= tantalum		
WASH	= low; local oscillator	P	= peak (used in parts list)	TC	= temperature compensating		
LO	= logarithmic taper (used in parts list)	PAM	= pulse-amplitude modulation	TD	= time delay		
LOG	= logarithmic	PC	= printed circuit	TERM	= terminal		
log	= logarithmic	PCM	= pulse-code modulation; pulse-count modulation				
L.PF	= low pass filter	PDM	= pulse-duration modulation				
L.V	= low voltage	pF	= picofarad				
m	= meter (distance)	PH BRZ	= phosphor bronze				
mA	= milliampere	PHI.	= Phillips				
MAX	= maximum	PIN	= positive-intrinsic-negative				
MΩ	= megohm						
MEG	= meg (10 <sup>6</sup> ) (used in parts list)						
MET FILM	= metal film						
MET OX	= metal oxide						
MF	= medium frequency; microfarad (used in parts list)						

**NOTE**  
All abbreviations in the parts list will be in upper case.

## MULTIPLIERS

Abbreviation	Prefix	Multiple
T	tera	10 <sup>12</sup>
G	giga	10 <sup>9</sup>
M	mega	10 <sup>6</sup>
k	kilo	10 <sup>3</sup>
da	deka	10
d	deci	10 <sup>-1</sup>
c	centi	10 <sup>-2</sup>
m	milli	10 <sup>-3</sup>
μ	micro	10 <sup>-6</sup>
n	nano	10 <sup>-9</sup>
p	pico	10 <sup>-12</sup>
f	femto	10 <sup>-15</sup>
a	atto	10 <sup>-18</sup>



Table 6-1. Replaceable Parts, 59301A ASCII to Parallel Converter

REF. DESIG.	HP PART NO.	QTY	DESCRIPTION	MFR. CODE	MFR. PART NO.
A1	59301-60001	1	BD ASSY - PAR OUTPUT	28480	59301-60001
A1C1	0180-2101	1	C:FXD ELECT 4000 $\mu$ F +75 -10% 15 VDCW	28480	0180-2101
A1C2	0180-3879	2	C:FXD CER 0.01 $\mu$ F 20% 100 VDCW	72982	8121-B112-X7R-103M
A1C3	0160-0158	3	C:FXD MY 0.0056 $\mu$ F 10% 200 VDCW	56289	292P56292-PTS
A1C4	0180-0106	1	C:FXD ELECT 60 $\mu$ F 20% 6 VDCW	28480	0180-0106
A1C5	0160-0158		C:FXD MY 0.0056 $\mu$ F 10% 200 VDCW	56289	292P56292-PTS
A1C6	0160-0153	1	C:FXD MY 0.001 $\mu$ F 10% 200 VDCW	56289	192P10292-PTS
A1C7	0160-0158		C:FXD MY 0.0056 $\mu$ F 10% 200 VDCW	56289	292P56292-PTS
A1C8	0160-0205	1	C:FXD MY 10 pF 10% 500 VDCW	28480	0160-0205
A1C9	0160-3878		C:FXD CER 0.01 $\mu$ F 20% 100 VDCW	72982	8121-B112-X7R-103M
A1CR1	1901-0040	2	DIODE: SILICON 50 MA 30 WV	07263	FDG1088
A1CR2	1901-0327	2	DIODE: SILICON 1.0A 200 WV	03508	A14B
A1CR3	1901-0327		DIODE: SILICON 1.0A 200 WV	03508	A14B
A1CR4	1901-0040		DIODE: SILICON 50 MA 30 WV	07263	FDG1088
A1DS1	2140-0388	2	LAMP: INCANDESCENT	71744	CM-8640
A1DS2	2140-0388		LAMP: INCANDESCENT	71744	CM-8640
A1J1	1251-0087	2	CONNECTOR: RACK AND PANEL MICRO-RIBBON 50 PIN	02660	57-40500-375
A1J2	1251-0087		CONNECTOR: RACK AND PANEL MICRO-RIBBON 50 PIN	02660	57-40500-375
A1Q1	1854-0094	2	TSTR: NPN SILICON	07263	2N3646
A1Q2	1854-0094		TSTR: NPN SILICON	07263	2N3646
A1R1	0683-1025	9	R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R2	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R3	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R4	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R5	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R6	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R7	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R8	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R9	0683-1025		R:FXD COMP 1000 OHM 5% 1/4W	01121	CB1025
A1R10	0683-1035	1	R:FXD COMP 10K OHM 5% 1/4W	01121	CB1035
A1R11	0683-1215	3	R:FXD COMP 120 OHM 5% 1/4W	01121	CB1215
A1R12	0683-1215		R:FXD COMP 120 OHM 5% 1/4W	01121	CB1215
A1R13	0683-2725	4	R:FXD COMP 2700 OHMS 5% 1/4W	01121	CB2725
A1R14	0683-2725		R:FXD COMP 2700 OHMS 5% 1/4W	01121	CB2725
A1R15	0683-2725		R:FXD COMP 2700 OHMS 5% 1/4W	01121	CB2725
A1R16	0683-2725		R:FXD COMP 2700 OHMS 5% 1/4W	01121	CB2725
A1R17	0683-5125	1	R:FXD COMP 5100 OHMS 5% 1/4W	01121	CB5125
A1R18	0683-4725	1	R:FXD COMP 4700 OHMS 5% 1/4W	01121	CB4725
A1R19	0683-1215		R:FXD COMP 120 OHM 5% 1/4W	01121	CB1215
A1RP1	1810-0055	8	R:NETWORK 8 RES. 10K OHM 5% 1/8W	56289	200C1793-CRR
A1RP2	1810-0055		R:NETWORK 8 RES. 10K OHM 5% 1/8W	56289	200C1793-CRR
A1RP3	1810-0055		R:NETWORK 8 RES. 10K OHM 5% 1/8W	56289	200C1793-CRR
A1RP4	1810-0055		R:NETWORK 8 RES. 10K OHM 5% 1/8W	56289	200C1793-CRR
A1RP5	1810-0055		R:NETWORK 8 RES. 10K OHM 5% 1/8W	56289	200C1793-CRR
A1RP6	1818-0055		R:NETWORK 8 RES. 10K OHM 5% 1/8W	56289	200C1793-CRR
A1RP7	1810-0055		R:NETWORK 8 RES. 10K OHM 5% 1/8W	56289	200C1793-CRR
A1RP8	1810-0055		R:NETWORK 8 RES. 10K OHM 5% 1/8W	56289	200C1793-CRR

Model 59301A  
Replaceable Parts

Table 6-1. Replaceable Parts, 59301A ASCII to Parallel Converter (Cont'd)

REF. DESIG.	HP PART NO.	QTY	DESCRIPTION	MFR. CODE	MFR. PART NO.
A1RP9	1810-0041	2	R:NETWORK 8 RES. 2.7K OHM 5%	28480	1810-0041
A1RP10	1810-0041		R:NETWORK 8 RES. 2.7K OHM 5%	28480	1810-0041
A1T1	9100-3030	1	TRANSFORMER: POWER	28480	9100-3030
A1U1	1820-0294	8	IC: TTL 8-BIT SER-IN PAR-OUT SHIFT REG.	12040	DM8570N
A1U2	1820-0294		IC: TTL 8-BIT SER-IN PAR-OUT SHIFT REG.	12040	DM8570N
A1U3	1820-0294		IC: TTL 8-BIT SER-IN PAR-OUT SHIFT REG.	12040	DM8570N
A1U4	1820-0294		IC: TTL 8-BIT SER-IN PAR-OUT SHIFT REG.	12040	DM8570N
A1U5	1820-0294		IC: TTL 8-BIT SER-IN PAR-OUT SHIFT REG.	12040	DM8570N
A1U6	1820-0294		IC: TTL 8-BIT SER-IN PAR-OUT SHIFT REG.	12040	DM8570N
A1U7	1820-0294		IC: TTL 8-BIT SER-IN PAR-OUT SHIFT REG.	12040	DM8570N
A1U8	1820-0294		IC: TTL 8-BIT SER-IN PAR-OUT SHIFT REG.	12040	DM8570N
A1U9	1816-0257	1	IC: TTL SPEC	28480	1816-0257
A1U10	1820-0598	2	IC: TTL LP QUAD 2-INPUT EXCLUSIVE OR GATE	12040	DM741.86N
A1U11	1820-0598		IC: TTL LP QUAD 2-INPUT EXCLUSIVE OR GATE	12040	DM741.86N
A1U12	1820-0515	1	IC: TTL DUAL RE-TRIG/RE-SET MONO- MULTI	07263	U7B960259X
A1U13	1920-0589	1	IC: TTL LP 8-INPUT NAND GATE	12040	DM741.30N
A1U14	1820-0985	1	IC: DTL 1800	04713	SC16284PK
A1U15	1820-0595	1	IC: TTL LP DUAL J-K M/S FF	12040	DM741.73N
A1U16	1820-0584	2	IC: TTL LP QUAD 2-INPUT NOR GATE	12040	DM741.02N
A1U17	1820-0174	1	IC: TTL HEX INVERTER	01295	SN7404N
A1U18	1820-0587	1	IC: TTL LP TRIPLE 3-INPUT NAND GATE	12040	DM741.10N
A1U19	1820-0584		IC: TTL LP QUAD 2-INPUT NOR GATE	12040	DM741.02N
A1U20	1820-1056	1	IC: TTL QUAD 2-INPUT NAND SCHMITT TRIGGER	01295	SN74132
A1U21	1820-0586	1	IC: TTL LP HEX INVERTER	12040	DM741.04N
A1U22	1820-0621	1	IC: TTL QUAD 2-INPUT NAND BUFFER OPEN COLLECTOR	01295	SN7438N
A1XU9	1200-0423	1	SOCKET IC 16 PIN	28480	1200-0423
A2	59301-60002	1	BD ASSY - I/O	28480	59301-60002
A2CR1	1901-0040	1	DIODE: SILICON 50 MA 30 WV	07263	FDG1088
A2J1	1200-0485	1	SOCKET I.C. 14 PIN	28480	1200-0485
A2P1	1251-3283	1	CONN MICRO RIBBON 24 PIN	02660	57-20240-2
A2RP1	1810-0136	2	RESISTOR NETWORK	28480	1810-0136
A2RP2	1810-0136		RESISTOR NETWORK	28480	1810-0136
A2S1	3101-1826	1	SWITCH ASSY: ROCKER DIP (7 SWITCHES)	02660	435166-1
	1200-0485	1	SOCKET: IC	28480	1200-0485
A2W1	8120-0594	1	CABLE ASSY 5.0 IN (12.5 CM) W/24 PIN CONNECTOR	28480	8120-0594
CHASSIS PARTS					
C1	0180-1735	1	C:FXD TANT .22 $\mu$ F $\pm$ 10% 35 WVDC	56289	150D224X 9035A2-DYS
U1	1820-0430	1	IC: VOLTAGE REGULATOR 5V $\pm$ 0.020V	12040	LM309K
XU1	1200-0041	1	TSTR SOCKET TO-3 PACKAGE	71785	133-32- 10-013
F1	2110-0007	1	FUSE, 1A 250V SLOW BLOW	71400	MDL-1
	5060-1189	1	PWR LINE MODULE	28480	5060-1189



Table 6-2. 59301A Cabinet Parts

	HP PART NO.	QTY	DESCRIPTION	MFR. CODE	MFR. PART NO.
1	5040-7203	1	TRIM-TOP	28480	5040-7203
2	59301-00001	1	PANEL, FRONT	28480	59301-00001
3	5020-8813	1	FRAME, FRONT	28480	5020-8813
4	5040-7201	4	FOOT	28480	5040-7201
5	5040-7209	1	COVER-BOTTOM	28480	5040-7209
6	59301-00004	2	BRACKET MOTHER BOARD	28480	59301-00004
7	5040-7212	2	COVER-SIDES	28480	5040-7212
8	59301-00002	1	PANEL, REAR	28480	59301-00002
9	5040-7208	1	COVER-TOP	28480	5040-7208

Table 6-3. Manufacturers Code List

MFR. NO.	MANUFACTURER NAME	ADDRESS	ZIP CODE
01121	ALLEN BRADLEY CO.	MILWAUKEE, WIS.	53204
01295	TEXAS INSTRUMENTS INC. SEMICONDUCTOR COMPONENTS DIV.	DALLAS, TEX.	75231
02660	AMPHENOL CORP.	BROADVIEW, ILL.	60153
03508	G.E. CO. SEMICONDUCTOR PROD. DEPT.	SYRACUSE, N.Y.	13201
04713	MOTOROLA SEMICONDUCTOR PROD. INC.	PHOENIX, ARIZ.	85008
07263	FAIRCHILD CAMERA & INST. CORP. SEMICONDUCTOR DIV.	MOUNTAIN VIEW, CALIF.	94040
12040	NATIONAL SEMICONDUCTOR CORP.	DANBURY, CONN.	06810
28480	HEWLETT-PACKARD CO. CORPORATE HQ.	YOUR NEAREST HP OFFICE	
56289	SPRAGUE ELECTRIC CO.	N. ADAMS, MASS.	01247
71400	BUSSMAN MFG. DIV. MC GRAW-EDISON CO.	ST. LOUIS, MO.	63017
71744	CHICAGO MINIATURE LAMP WORKS	CHICAGO, ILL.	60640
71785	CINCH MFG. CO. DIV TRW INC.	ELK GROVE VILLAGE, ILL.	
72982	ERIE TECHNOLOGICAL PROD. INC.	ERIE, PA.	16512

Model 59301A  
Replaceable Parts

1. TRIM — TOP
2. PANEL, FRONT
3. FRAME, FRONT
4. FOOT
5. COVER — BOTTOM
6. BRACKET MOTHER BOARD
7. COVER — SIDES
8. PANEL, REAR
9. COVER — TOP

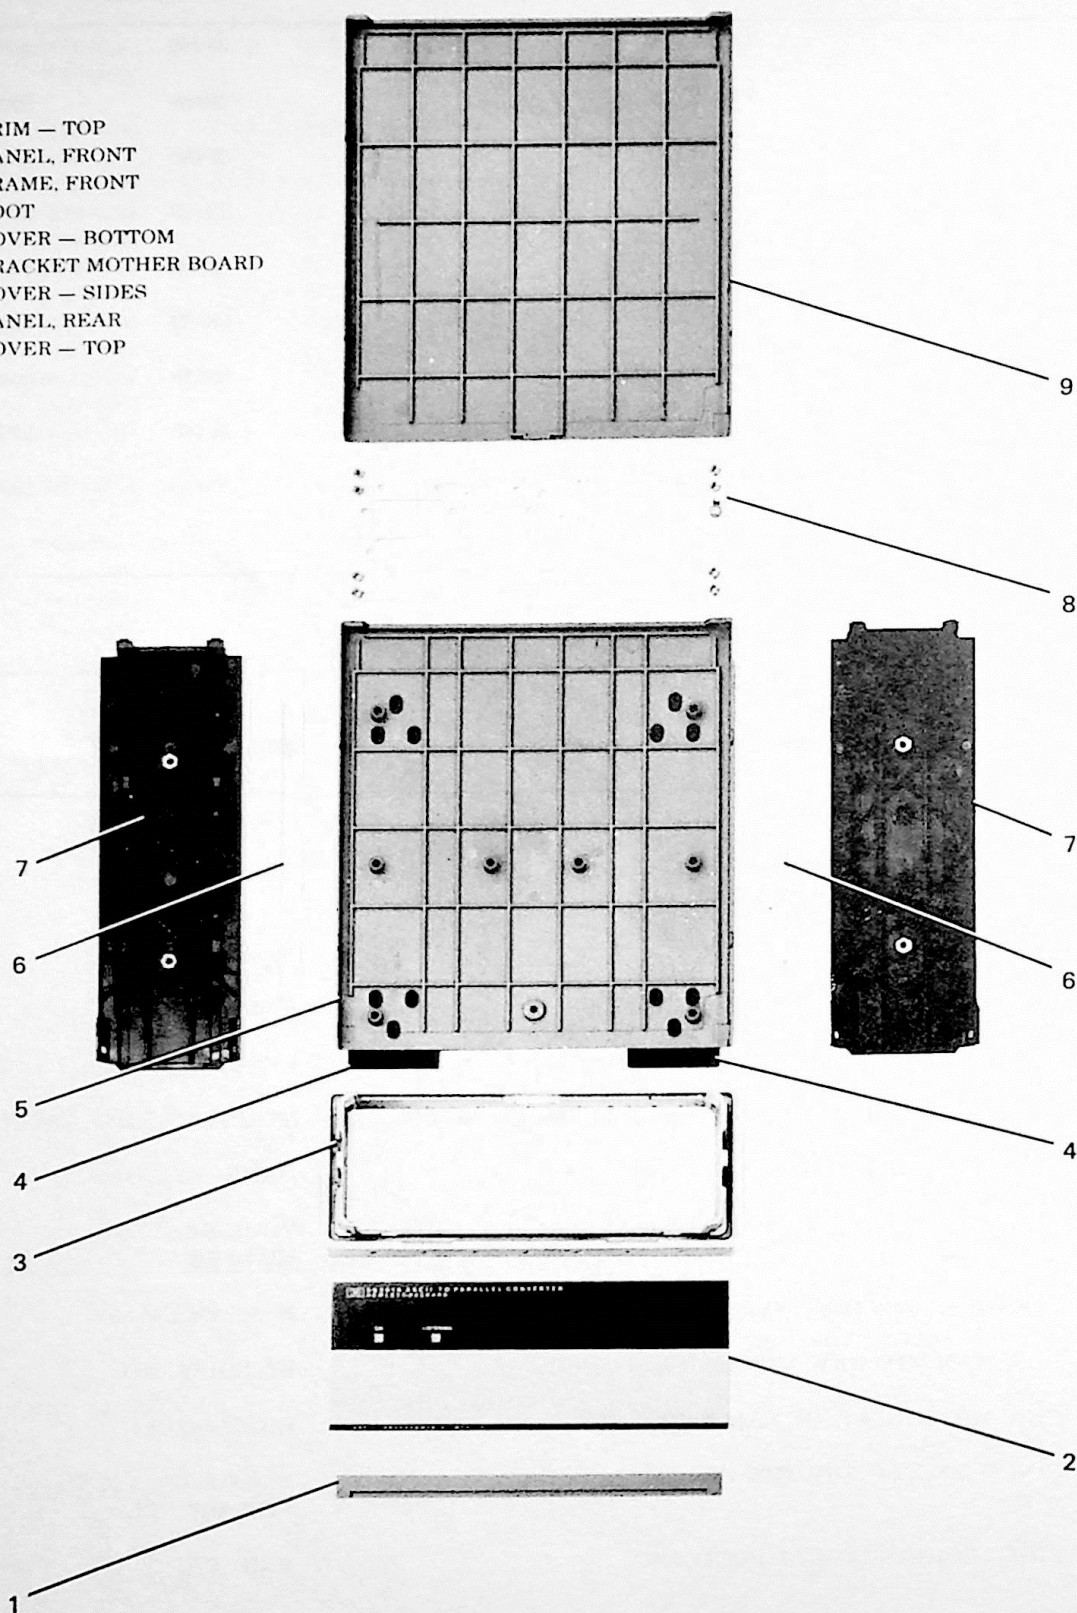


Figure 6-1. Cabinet Parts



## SECTION VII

### OPTIONS AND MANUAL CHANGES

#### 7-1. INTRODUCTION

7-2. This section contains information necessary to adapt this manual to older instruments. As options are made available for this instrument, operating and installation instructions will be provided.

#### 7-3. MANUAL CHANGES

7-4. This manual applies directly to Model 59301A having serial prefix 1328A (refer to paragraph 1-6).

#### 7-5. Newer Instruments

7-6. As changes are made, newer instruments may have serial prefixes that are not listed in this manual. The manuals for these instruments are supplied with a manual change sheet, containing the required information. Contact the nearest Hewlett-Packard Sales and Service Office for information if this sheet is missing.

#### 7-7. Older Instruments

7-8. To adapt this manual to instruments with serial prefix 1316A, make the following manual changes.

- a. In Table 6-1, change the parts lists as follows:
  1. Delete resistors A1R1, A1R13, and A1R18.
  2. Delete transistor A1Q1.
  3. Add A1CR5 1902-3082 DIODE BREAKDOWN: SILICON 4.64V, Mfr. Code 28480, Mfr. Part Number 1902-3082.
  4. Add A1R19 0683-1525 R:FXD 1.5 k $\Omega$  5% .250W, Mfr. Code 01121, Mfr. Part Number CB 1525.
- b. In Figure 8-3, make the following changes:
  1. Delete A1R1, A1R13, A1R18, and A1Q1.
  2. Add a NAND gate (A1U20B) and make the following connections:
    - a. Connect pin 6 of U20B to pin 9 of U19C and to pins 11 and 12 of U19D.
    - b. Connect pin 4 of U20B to +5 volts.
    - c. Connect pin 5 of U20B to J1 pin 23.
  3. Add Zener Diode A1CR1 (part number 1902-3082) from pin 5 of U20B to common. Anode side of diode connects to common.
  4. Add resistor A1R19 (part number 0683-1525) in parallel with Zener Diode A1CR1.
- c. In Figure 8-3, replace component locator with Figure 7-1.

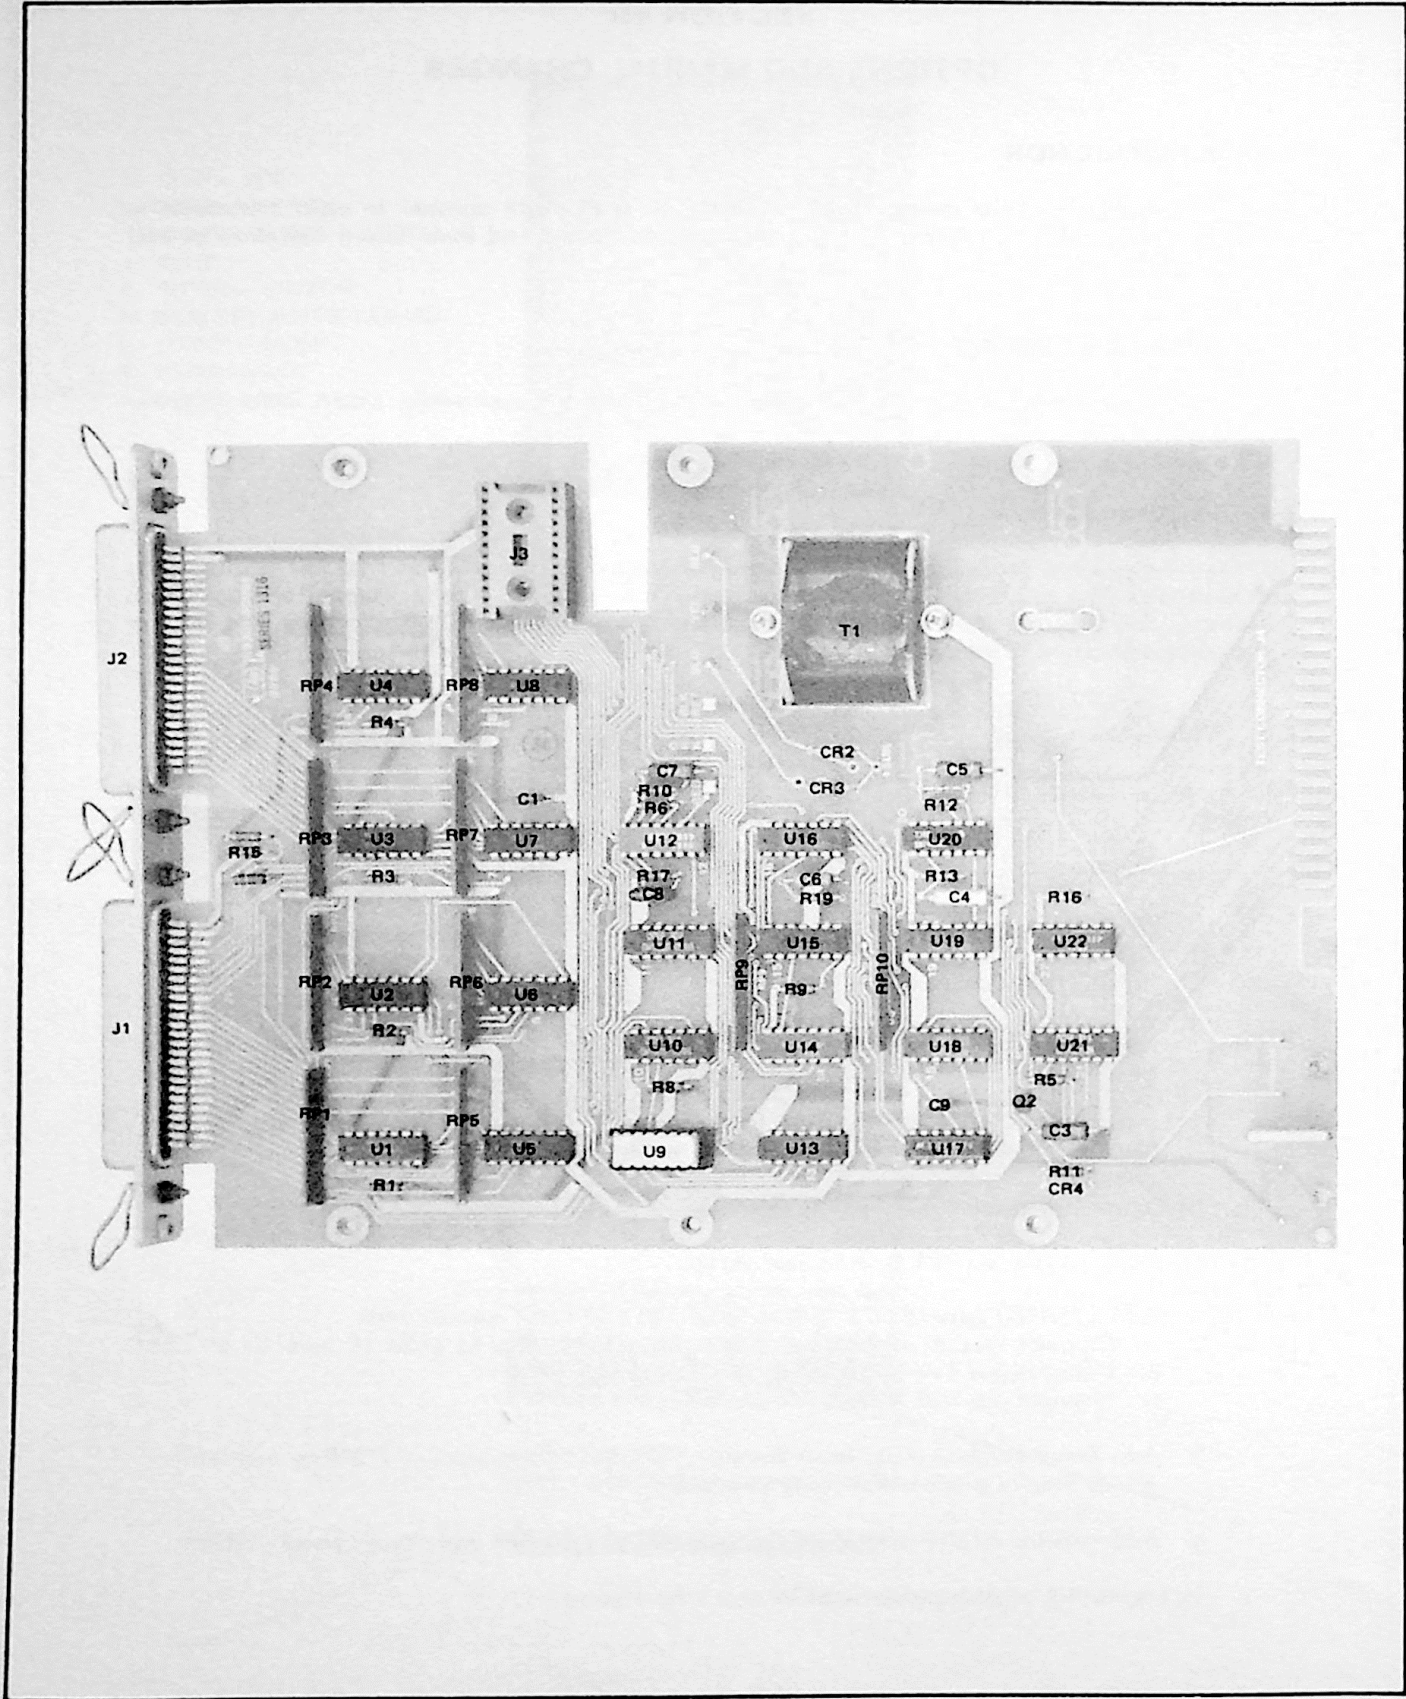


Figure 7-1. Parallel Output Board Assembly A1 (Series 1316A) Component Locator



## SECTION VIII

### SCHEMATIC DIAGRAMS


#### 8-1. INTRODUCTION

8-2. This section includes schematic diagram notes (Figure 8-1), digital bus connector pin designations, component locators, and a schematic diagram for the 59301A ASCII to Parallel Converter.

### SYMBOLS


	FRONT PANEL		MAIN SIGNAL PATH
	REAR PANEL		FEEDBACK PATH
	INTERIOR AND PC BOARDS		TEST POINT
	WIPER MOVES TOWARD "CW" WHEN CONTROL IS ROTATED CLOCKWISE		"AND" GATE
	POWER LINE GROUND		"OR" GATE
	CIRCUIT COMMON GROUND		INVERTER
	FLOATING GROUND		NAND GATE
	CHASSIS GROUND		NOR GATE
	KNOB CONTROL		EXCLUSIVE NOR
	SCREWDRIVER ADJUST		

### SWITCH DESIGNATIONS

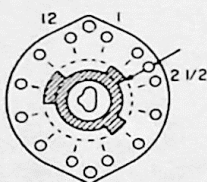

A351BR(2-1/2)

<b>A351</b>	SWITCH S1 WITHIN ASSEMBLY A3
<b>B</b>	2ND WAFER FROM FRONT (A=1ST, ETC)
<b>R</b>	REAR OF WAFER (F=FRONT)
<b>(2-1/2)</b>	TERMINAL LOCATION (2 1/2) (VIEWED FROM FRONT)

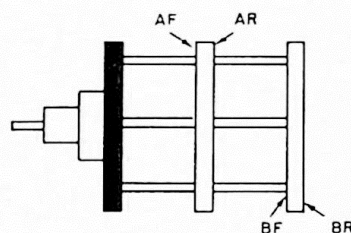

### REFERENCE DESIGNATIONS

REFERENCE DESIGNATIONS WITHIN ASSEMBLIES ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION. JACKS ARE THE STATIONARY CONNECTORS AND PLUGS ARE THE MORE MOVEABLE OF TWO CONNECTORS.

ASSEMBLY	ABBREVIATION	COMPLETE DESCRIPTION
A25	C1	A25C1
A25A1	CR1	A25A1CR1
NO PREFIX	J3	J3


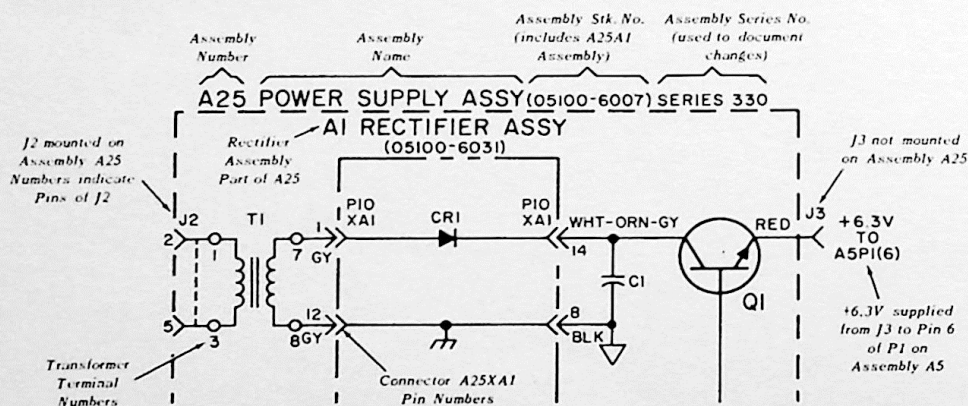


Figure 8-1. Schematic Diagram Notes




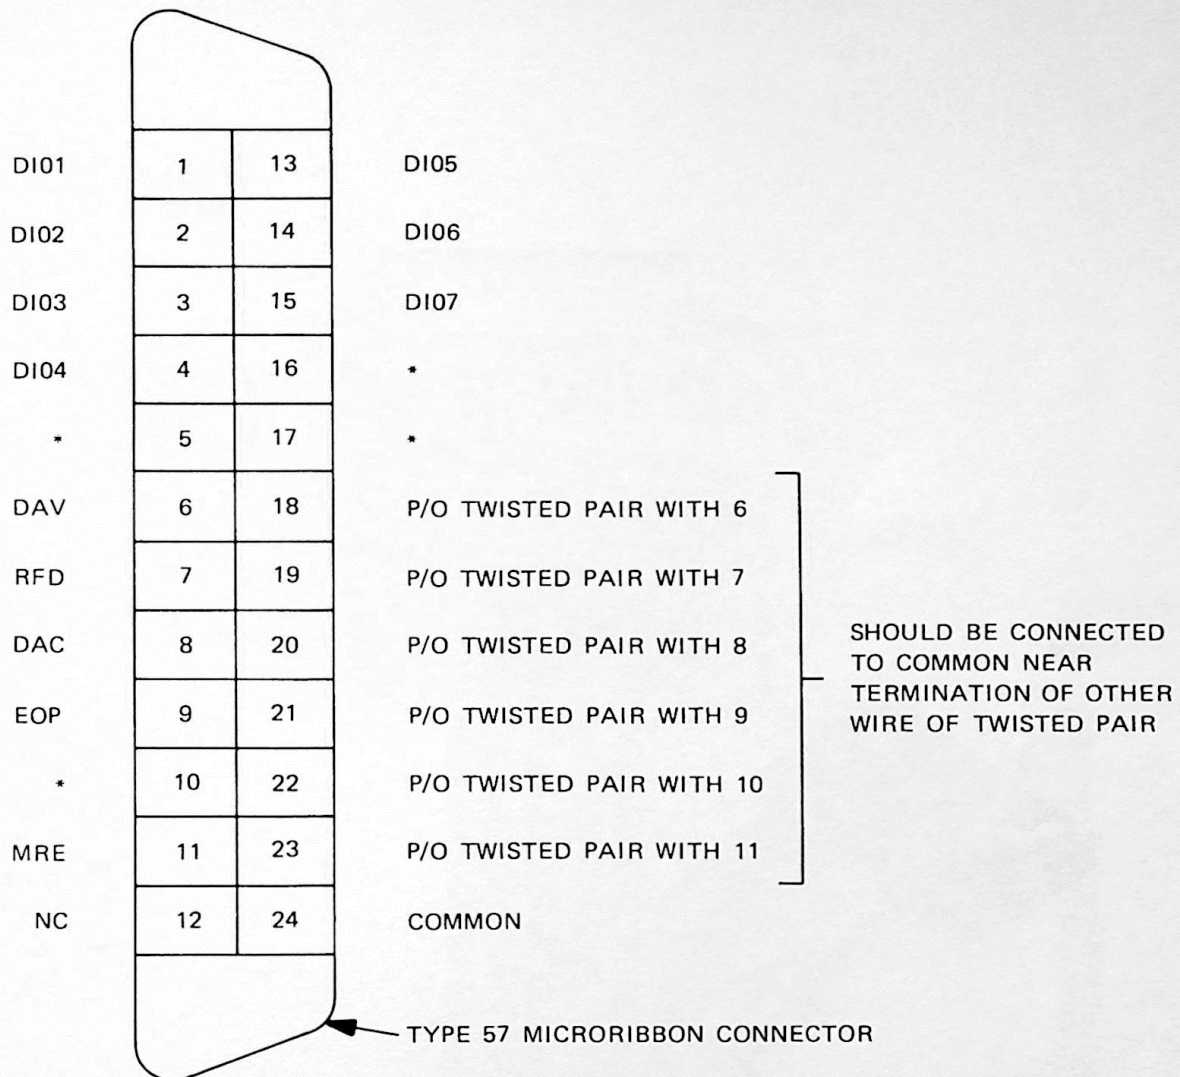

\*THESE PINS ARE TERMINATED WITH RESISTIVE NETWORKS (SEE SCHEMATIC) AND NORMALLY FLOAT AT APPROXIMATELY 3V.


NOTE 1: PINS 18 THROUGH 23 SHOULD BE CONNECTED TO COMMON NEAR THE TERMINATION OF THE OTHER WIRE OF ITS TWISTED PAIR. PIN 12 IS CONNECTED TO COMMON ONLY AT THE CONTROLLER.


Figure 8-2. Digital Bus Connector Pin Designations

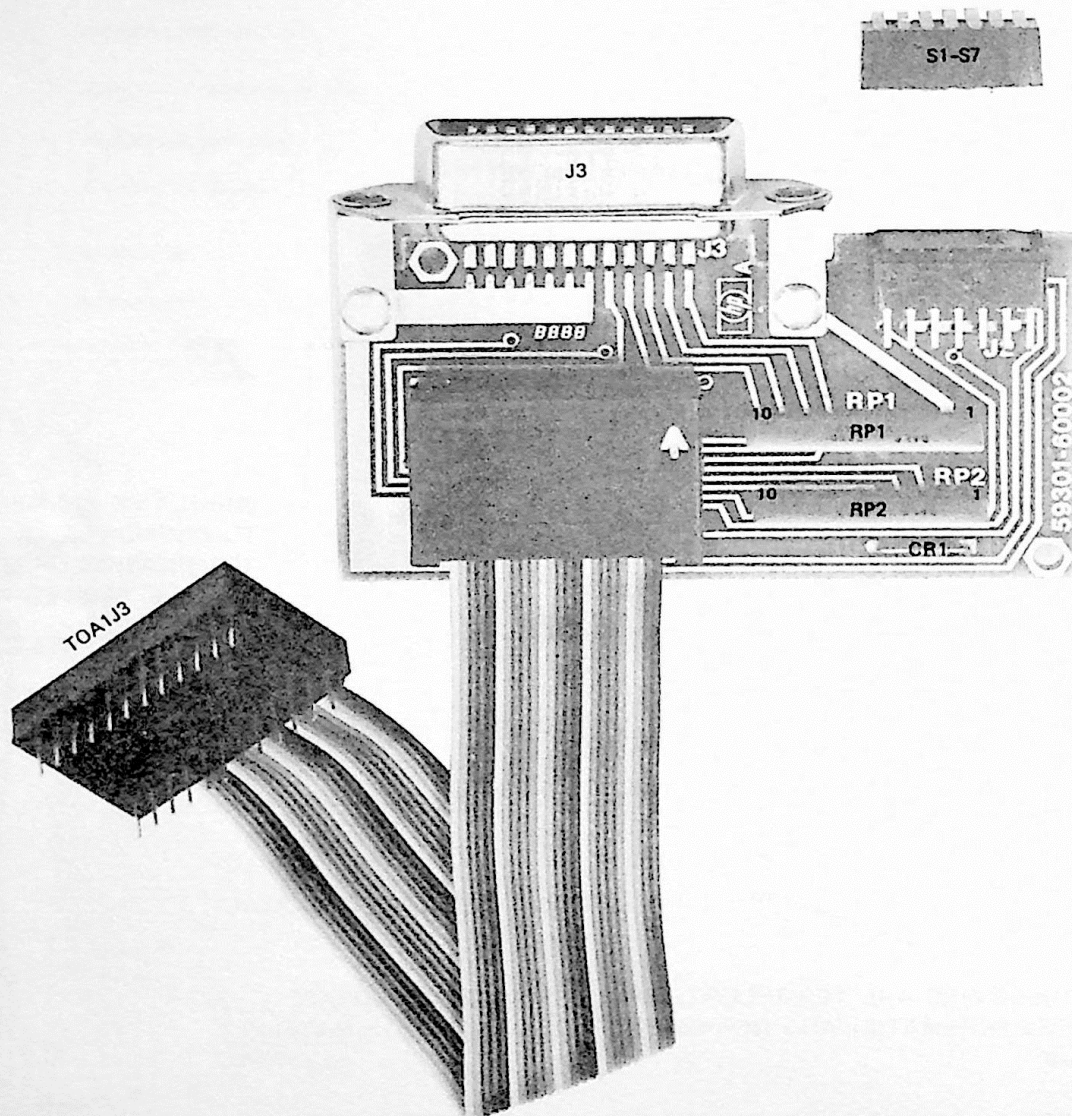

Part of Figure 8-3. 59301A Schematic Diagram



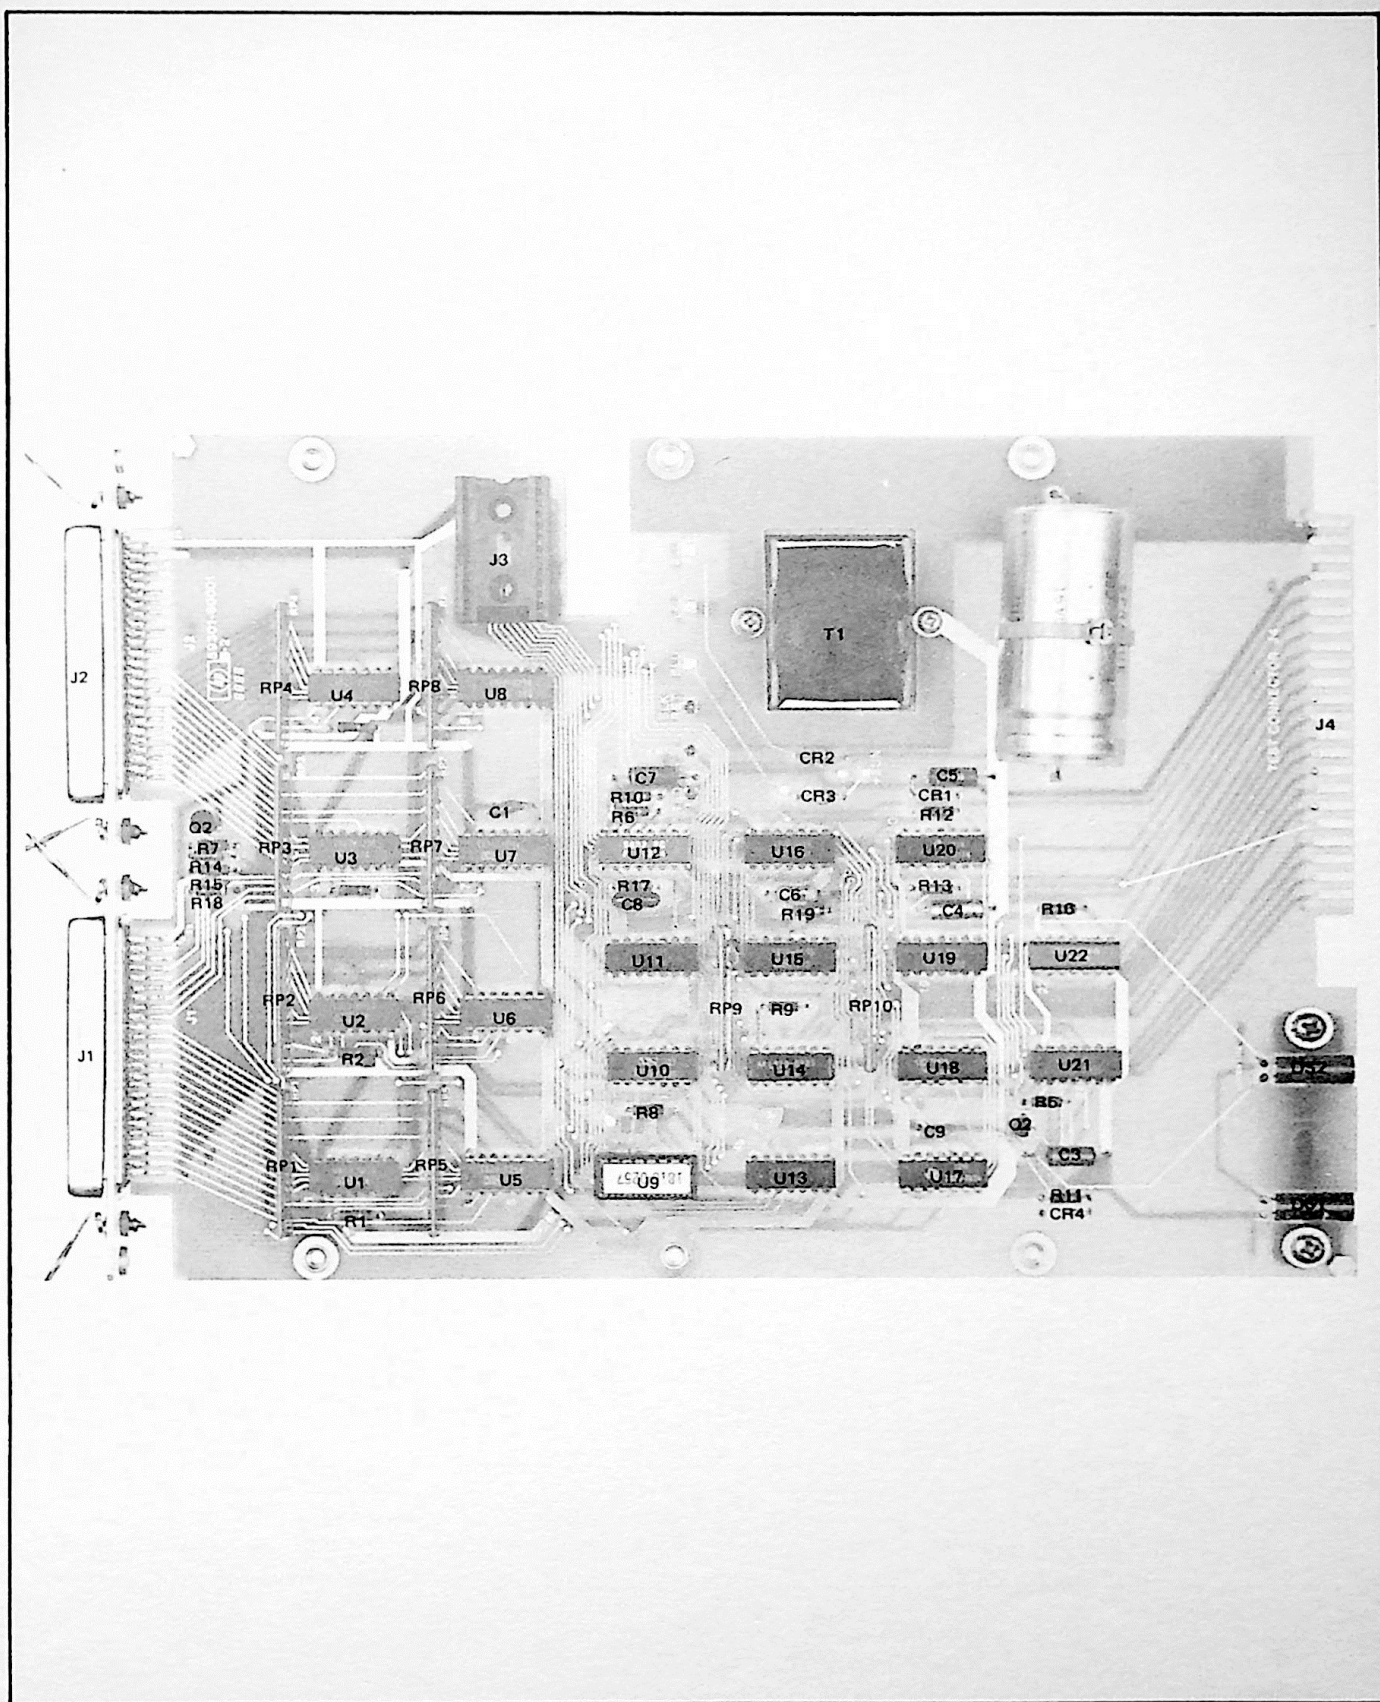

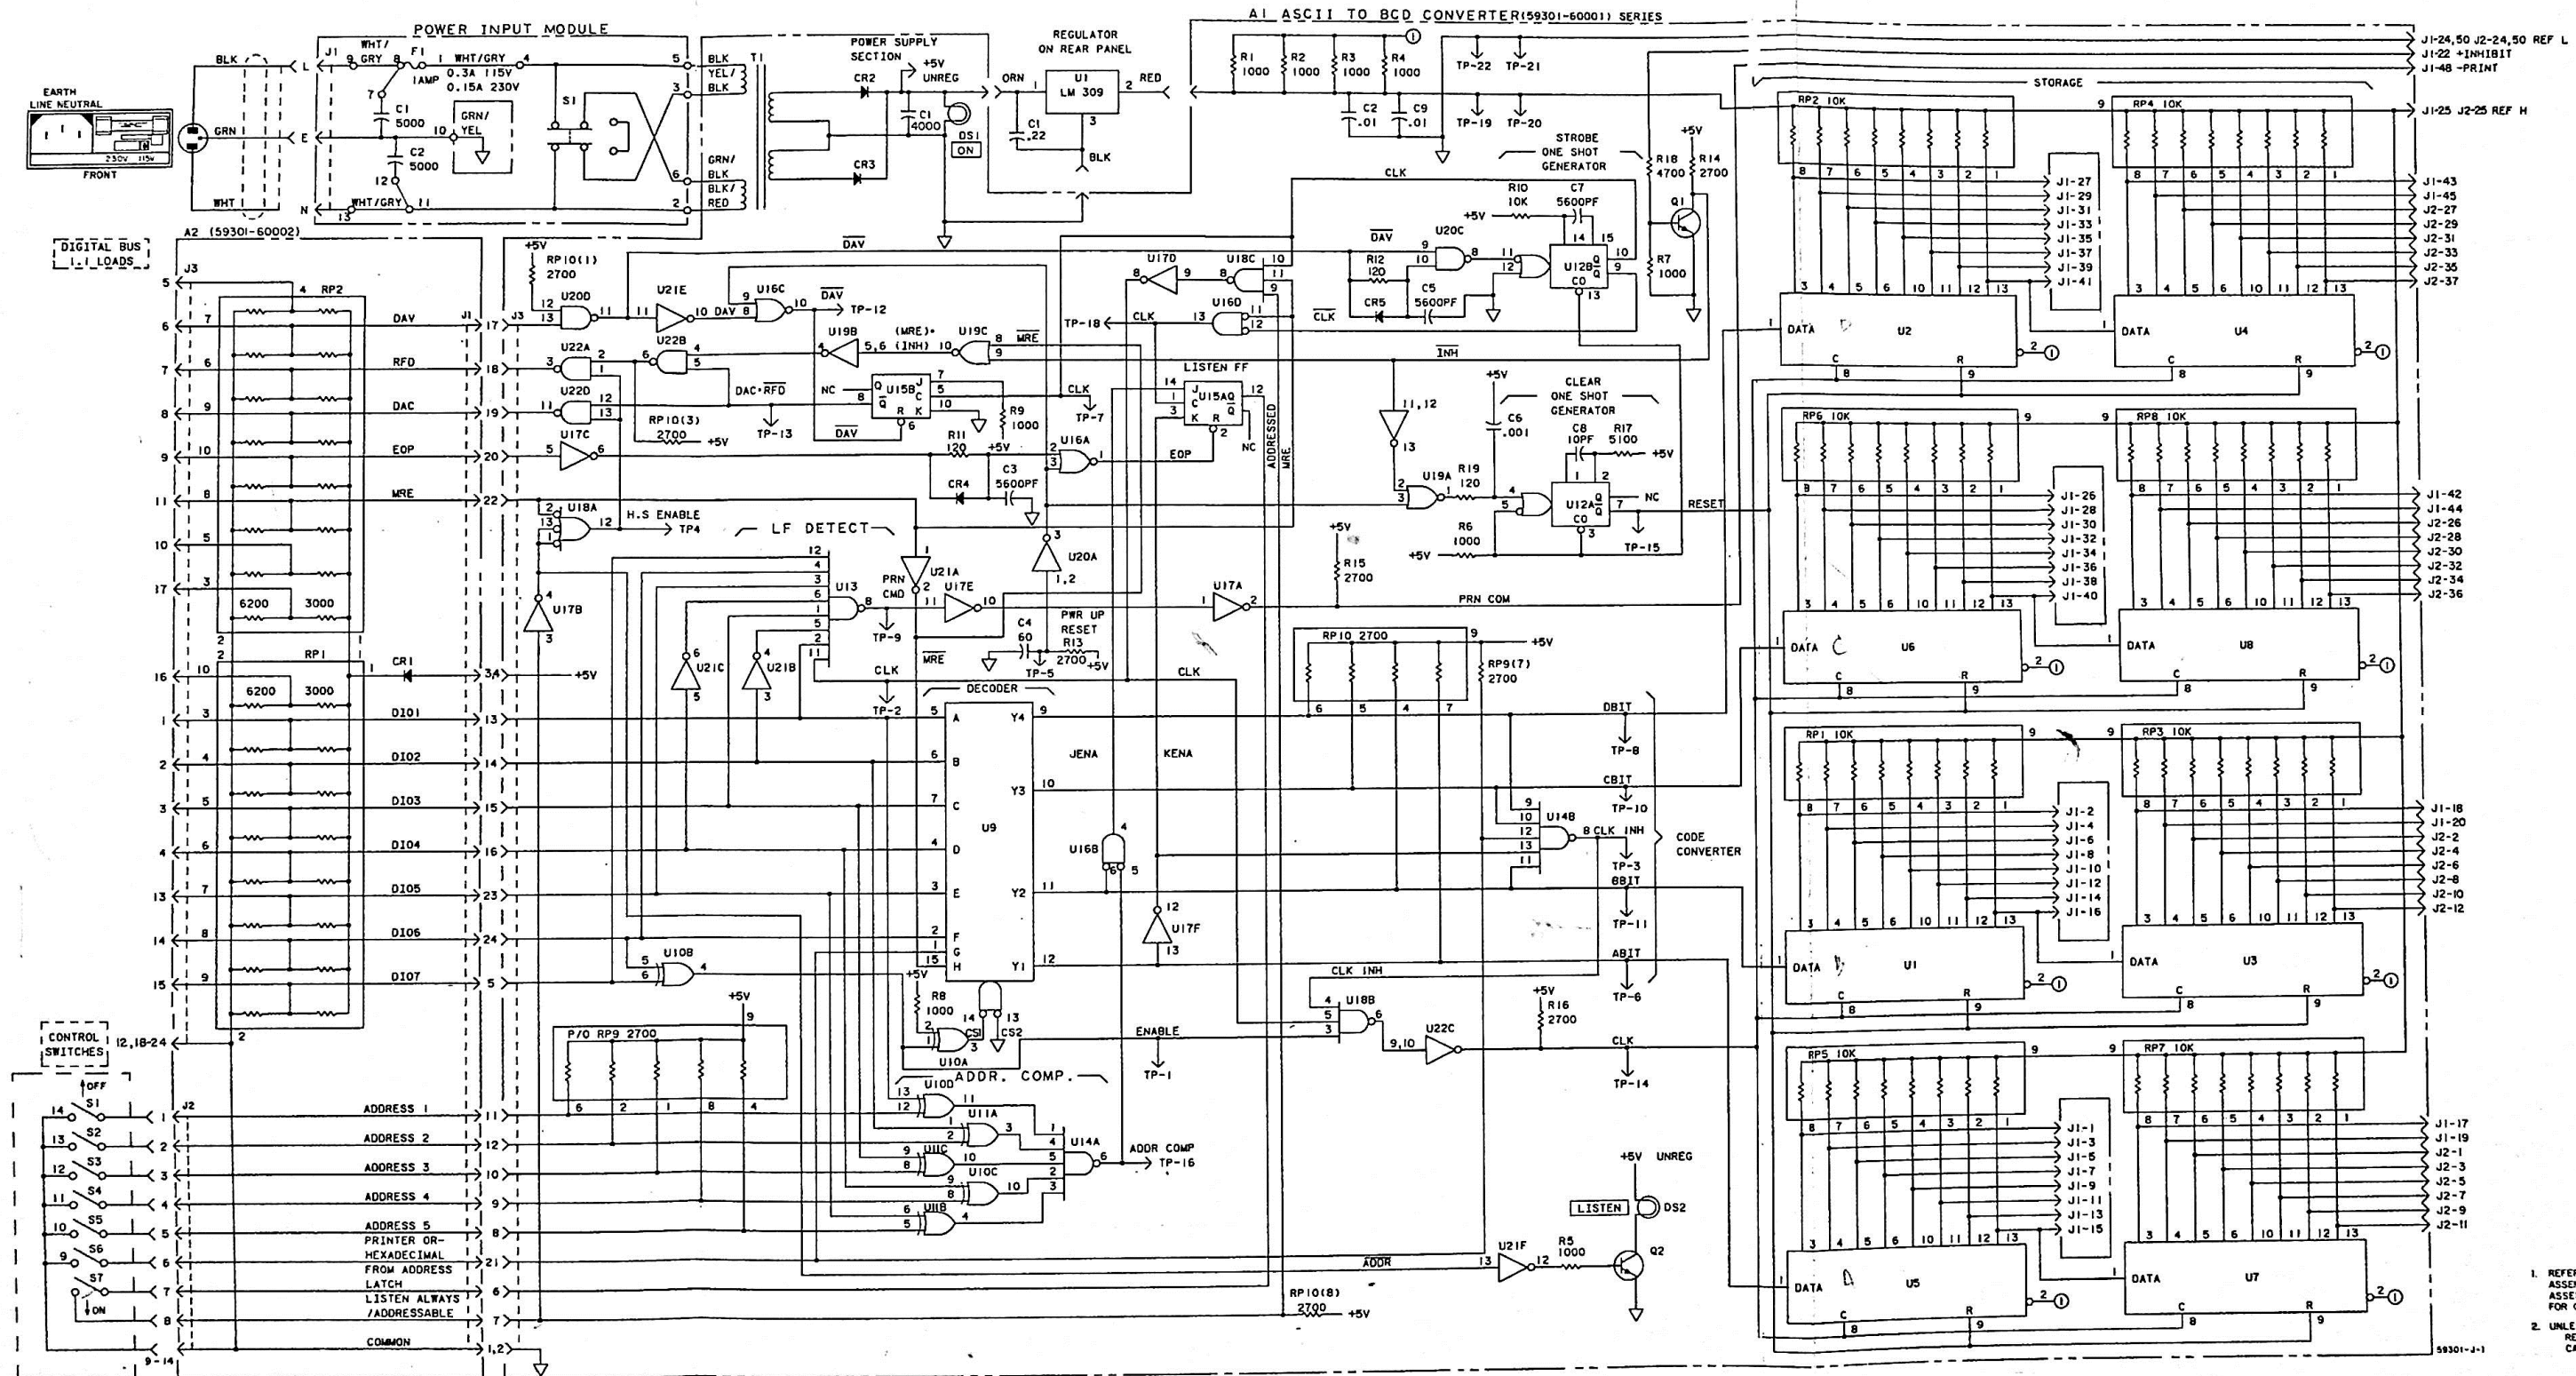


NOTES

- REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
- UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS; CAPACITANCE IN MICROFARADS

Figure 8-3  
59301A SCHEMATIC DIAGRAM  
8-5



Model 59301A  
Schematic Diagrams

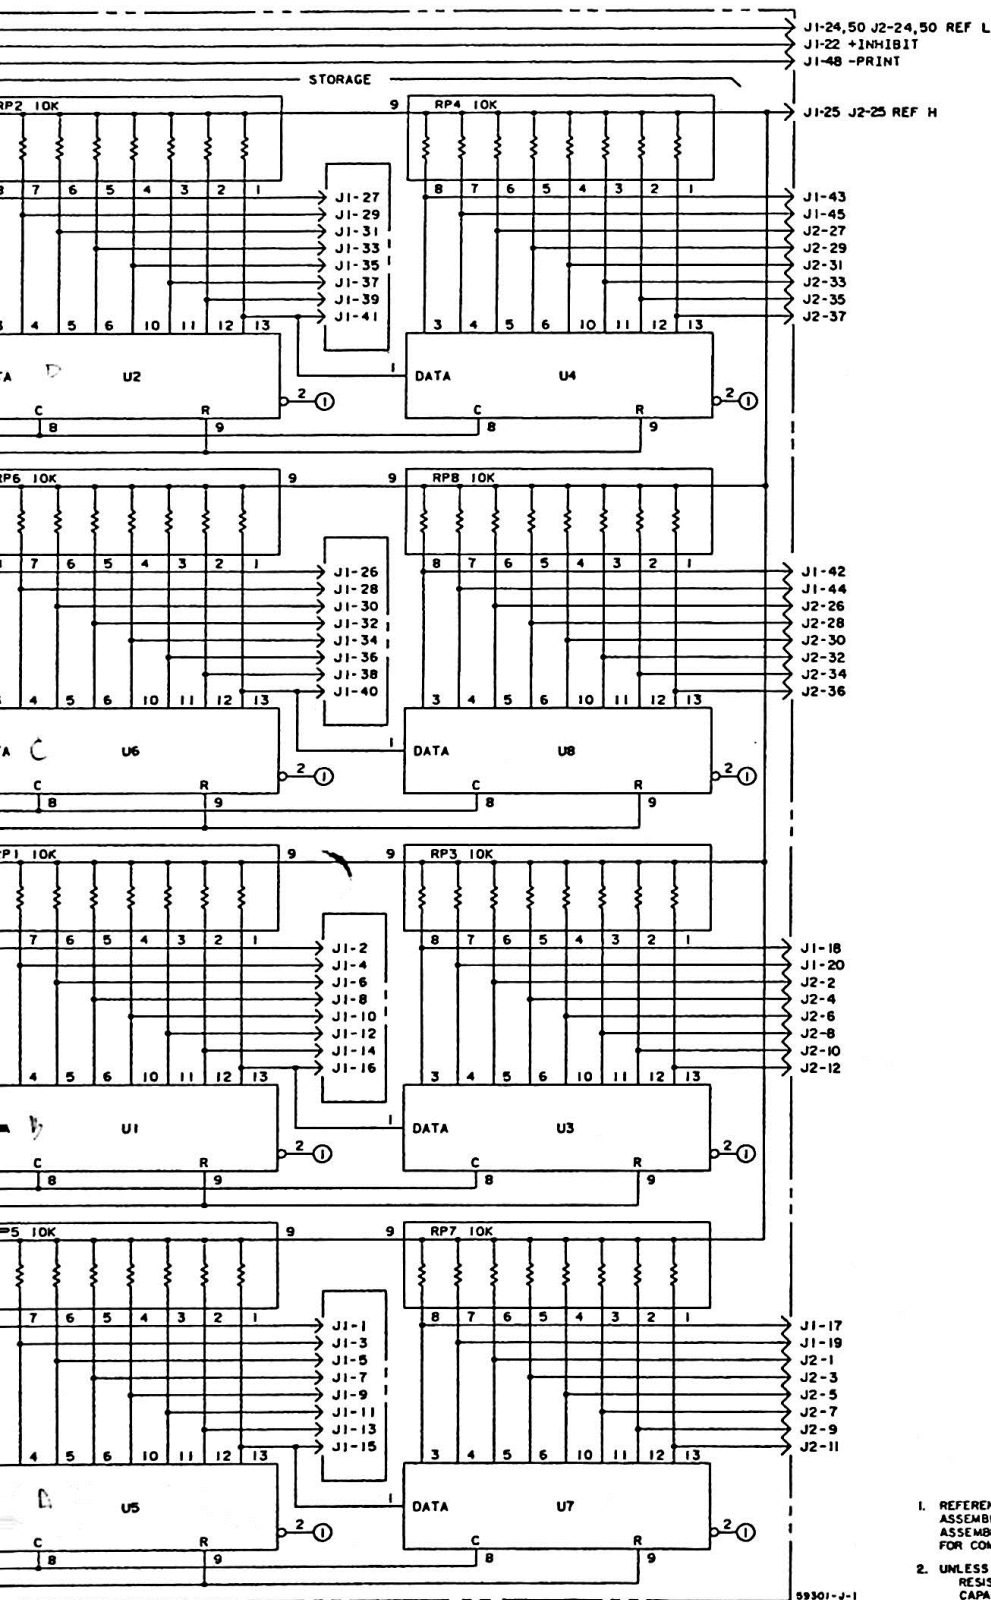

NOTES

1. REFERENCE DESIGNATIONS WITHIN THIS ASSEMBLY ARE ABBREVIATED. ADD ASSEMBLY NUMBER TO ABBREVIATION FOR COMPLETE DESCRIPTION.
2. UNLESS OTHERWISE INDICATED:  
RESISTANCE IN OHMS;  
CAPACITANCE IN MICROFARADS

Figure 8-3  
59301A SCHEMATIC DIAGRAM

# HEWLETT·PACKARD

## ELECTRONIC INSTRUMENTATION SALES AND SERVICE

### UNITED STATES, CENTRAL AND SOUTH AMERICA, CANADA

#### UNITED STATES

**ALABAMA**  
P.O. Box 4207  
2003 Byrd Street Road S.W.  
Birmingham 35202  
Tel: (205) 841-4581  
TWX: 810-728-2204

**ARIZONA**  
2336 C. Magnolia St.  
Phoenix 85034  
Tel: (602) 244-1361  
TWX: 910-951-1330  
5737 East Broadway  
Tucson 85711  
Tel: (602) 298-2313  
TWX: 910-952-1162

**CALIFORNIA**  
1430 East Orangeherpe Ave.  
Fullerton 92631  
Tel: (714) 870-1000  
TWX: 910-597-1288

3939 Lankershim Boulevard  
North Hollywood 91604  
Tel: (213) 877-1282  
TWX: 910-499-2170  
6305 Arizona Place  
Los Angeles 90045  
Tel: (213) 649-2511  
TWX: 910-378-6148

1101 Embrocadero Road  
Palo Alto 94301  
Tel: (415) 327-4500  
TWX: 910-373-1280

2220 Watt Ave.  
Sacramento 95825  
Tel: (916) 482-1463  
TWX: 910-367-2092

9606 Aero Drive  
San Diego 92123  
Tel: (714) 278-3200  
TWX: 910-335-2000

**COLORADO**  
7965 East Prentice  
Englewood 80110  
Tel: (303) 771-5455  
TWX: 910-933-0705

**CONNECTICUT**  
12 Lunar Drive  
New Haven 06525  
Tel: (203) 389-4551  
TWX: 710-465-2029

**FLORIDA**  
P.O. Box 24210  
2808 W. Oakland Park Blvd.  
Ft. Lauderdale 33307  
Tel: (305) 731-2020  
TWX: 510-955-4099

P.O. Box 19910  
6177 Lake Etowah Dr.  
Orlando 32809  
Tel: (305) 858-2900  
TWX: 810-850-0113

**GEORGIA**  
P.O. Box 78234  
450 Interstate North  
Atlanta 30378  
Tel: (404) 436-6181  
TWX: 910-768-4890

**HAWAII**  
2875 So. King Street  
Honolulu 96814  
Tel: (808) 955-4455

**ILLINOIS**  
5500 Howard Street  
Skokie 60076  
Tel: (312) 677-0400  
TWX: 910-223-3613

**INDIANA**  
3839 Meadows Drive  
Indianapolis 46205  
Tel: (317) 546-4891  
TWX: 810-341-3263

**LOUISIANA**  
P.O. Box 856  
3239 Williams Boulevard  
Kenner 70062  
Tel: (504) 721-4201  
TWX: 810-955-5524

**MAINE**  
P.O. Box 856  
3239 Williams Boulevard  
Kenner 70062  
Tel: (504) 721-4201  
TWX: 810-955-5524

**MASSACHUSETTS**  
32 Hawthorn Ave.  
Lynnwood 01913  
Tel: (617) 861-8960  
TWX: 710-376-4904

**MICHIGAN**  
21840 West Nine Mile Road  
Southfield 48075  
Tel: (313) 353-8100  
TWX: 710-774-4882

**MINNESOTA**  
2459 University Avenue  
St. Paul 55114  
Tel: (612) 845-8461  
TWX: 810-563-3734

**MISSOURI**  
11131 Colorado Ave.  
Kansas City 64137  
Tel: (816) 763-8000  
TWX: 910-771-7087

148 Weldon Parkway  
Maryland Heights 63043  
Tel: (314) 567-1455  
TWX: 910-764-0830

**NEVADA**  
Las Vegas  
Tel: (702) 382-5777

**NEW JERSEY**  
W. 120 Century Road  
Paramus 07652  
Tel: (201) 265-5000  
TWX: 710-990-4951

1060 N. Kings Highway  
Cherry Hill 08034  
Tel: (609) 667-4000  
TWX: 710-892-4945

**MARYLAND**  
6707 Whitehouse Road  
Baltimore 21207  
Tel: (301) 944-5400  
TWX: 710-862-9157

**NEW MEXICO**  
P.O. Box 8366  
Station C  
6501 Lomas Boulevard N.E.  
Albuquerque 87108  
Tel: (505) 265-3713  
TWX: 910-989-1645

154 Wyatt Drive  
Las Cruces 88001  
Tel: (505) 526-2485  
TWX: 910-983-0550

**NEW YORK**  
6 Automation Lane  
Computer Park  
Albany 12205  
Tel: (518) 458-1550  
TWX: 710-441-8770

1219 Campbell Road  
Eastford 13760  
Tel: (607) 754-0050  
TWX: 510-252-0890

New York City  
Manhattan, Bronx  
Contact: Paramus, NJ Office  
Tel: (201) 265-5000  
Brooklyn, Queens, Richmond  
Contact: Woodbury, NY Office  
Tel: (516) 921-0300

82 Washington Street  
Poughkeepsie 12601  
Tel: (914) 454-7330  
TWX: 510-248-0012

39 Saginaw Drive  
Rochester 14623  
Tel: (716) 479-9500  
TWX: 510-253-5981

5858 East Molloy Road  
Syosset 11711  
Tel: (516) 454-2486  
TWX: 710-541-0482

1 Crossways Park West  
Woodbury 11797  
Tel: (516) 921-0300  
TWX: 510-271-2168

**NEW MEXICO**  
P.O. Box 8366  
Station C  
6501 Lomas Boulevard N.E.  
Albuquerque 87108  
Tel: (505) 265-3713  
TWX: 910-989-1645

154 Wyatt Drive  
Las Cruces 88001  
Tel: (505) 526-2485  
TWX: 910-983-0550

**NEW YORK**  
6 Automation Lane  
Computer Park  
Albany 12205  
Tel: (518) 458-1550  
TWX: 710-441-8770

1219 Campbell Road  
Eastford 13760  
Tel: (607) 754-0050  
TWX: 510-252-0890

New York City  
Manhattan, Bronx  
Contact: Paramus, NJ Office  
Tel: (201) 265-5000  
Brooklyn, Queens, Richmond  
Contact: Woodbury, NY Office  
Tel: (516) 921-0300

82 Washington Street  
Poughkeepsie 12601  
Tel: (914) 454-7330  
TWX: 510-248-0012

39 Saginaw Drive  
Rochester 14623  
Tel: (716) 479-9500  
TWX: 510-253-5981

5858 East Molloy Road  
Syosset 11711  
Tel: (516) 454-2486  
TWX: 710-541-0482

1 Crossways Park West  
Woodbury 11797  
Tel: (516) 921-0300  
TWX: 510-271-2168

**NORTH CAROLINA**  
P.O. Box 5184  
1923 North Main Street  
High Point 27262  
Tel: (919) 845-8101  
TWX: 910-926-1516

**OHIO**  
25573 Center Ridge Road  
Cleveland 44145  
Tel: (216) 835-0300  
TWX: 810-427-9129

3460 South Oxley Drive  
Bartons 45479  
Tel: (513) 298-0351  
TWX: 810-458-1925

1120 Morse Road  
Columbus 43229  
Tel: (614) 846-1300

**OKLAHOMA**  
P.O. Box 32008  
Oklahoma City 73132  
Tel: (405) 721-0200  
TWX: 910-430-4862

**OREGON**  
17890 SW Boones Ferry Road  
Tualatin 97062  
Tel: (503) 620-3350  
TWX: 910-467-6714

**PENNSYLVANIA**  
2500 Main Side Boulevard  
Monroeville 15146  
Tel: (412) 271-0724  
TWX: 710-797-3650

1021 8th Avenue  
King of Prussia Industrial Park  
King of Prussia 19406  
Tel: (215) 265-7000  
TWX: 510-460-2670

**RHODE ISLAND**  
873 Waterman Ave.  
East Providence 02914  
Tel: (401) 434-5535  
TWX: 710-381-7573

**TENNESSEE**  
Memphis  
Tel: (901) 274-7472

**TEXAS**  
P.O. Box 1270  
201 E. Arapaho Rd.  
Richardson 75080  
Tel: (214) 231-6101  
TWX: 910-867-4723

P.O. Box 27409  
6300 Westpark Drive  
Suite 100  
Houston 77027  
Tel: (713) 781-6000  
TWX: 910-881-2645

231 Billy Mitchell Road  
San Antonio 78229  
Tel: (512) 434-4172  
TWX: 910-871-1170

**UTAH**  
2890 South Main Street  
Salt Lake City 84115  
Tel: (801) 487-0715  
TWX: 910-825-5681

**VIRGINIA**  
P.O. Box 6514  
2111 Spencer Road  
Richmond 23230  
Tel: (803) 285-3431  
TWX: 710-956-0157

**WASHINGTON**  
433-104th N.E.  
Bellevue 98004  
Tel: (206) 454-3371  
TWX: 910-443-2303

**\*WEST VIRGINIA**  
Charleston  
Tel: (304) 768-1232

**WISCONSIN**  
9431 W. Belmont Road  
Suite 117  
Milwaukee 53227  
Tel: (414) 541-0550

**FOR U.S. AREAS NOT LISTED:**  
Contact the regional office nearest you: Atlanta, Georgia...  
North Hollywood, California...  
Paramus, New Jersey...  
Shakila, Illinois. Their complete addresses are listed above.  
\*Service Only

#### CENTRAL AND SOUTH AMERICA

**ARGENTINA**  
Hewlett-Packard Argentina  
S.A.C. s.r.l.  
Lavalle 1171 - 3°  
Buenos Aires  
Tel: 35-0436, 35-0627, 35-0341  
Telex: 012-1009  
Cable: HEWPACK ARG

**BRAZIL**  
Hewlett-Packard Do Brasil  
I.E.C. LTDA.  
Rua Frei Caneca 1119  
01307-Sao Paulo - 3, SP  
Tel: 268-7111, 287-5858  
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil  
I.E.C. LTDA.  
Praça Dom Falcão 78  
Sales 008/008  
9000-Porto Alegre RS  
Bla Grande do Sul (RS)-Brasil  
Tel: 25-8470  
Cable: HEWPACK Porto Alegre

Hewlett-Packard Do Brasil  
I.E.C. LTDA.  
Avenida 10159  
2000-Rio de Janeiro, CB  
Tel: 264-2643  
Cable: HEWPACK Rio de Janeiro

**BOLIVIA**  
Stambak & Mark (Bolivia) LTDA.  
Av. Mariscal, Santa Cruz 1342  
La Paz  
Tel: 40876, 53163, 52421  
Telex: 3560014  
Cable: BUKMAR

**CHILE**  
Héctor Calcagno y Cia. Ltda.  
Casilla 16.475  
Santiago  
Tel: 423 96  
Cable: CALCAGNI Santiago

**COLOMBIA**  
Instrumentación  
Henrik A. Langbeek & Kier S.A.  
Carrera 7 No. 48-59  
Apartado Aéreo 8287  
Bogotá, D.E.  
Tel: 45-78-08, 45-55-46  
Cable: AARIS Bogotá  
Tel: 444001NSTCO

**COSTA RICA**  
Lic. Alfredo Gallagos Gordón  
Apartado 10159  
San José  
Tel: 21-86-13  
Cable: CALCUR San José

**ECUADOR**  
Laboratorio de Radio-Ingeniería  
Calle Guayaquil 1246  
Post Office Box 3199  
Quito  
Tel: 212-496, 219-185  
Cable: HORYATH Quito

**EL SALVADOR**  
Electronic Asociados  
Apartado Postal 1682  
Centro Comercial Gigante  
San Salvador, El Salvador C.A.  
Pasaje Escalon 4649-4° Piso  
Tel: 23-44-60, 23-32-37  
Cable: ELECAS

**GUATEMALA**  
IPESA  
Se via 2-01, Zona 4  
Guatemala City  
Tel: 83-4-27 & 64-7-86  
Tel: 4192 TELTRO GU

**MEXICO**  
Hewlett-Packard Mexicana, S.A.  
de C.V.  
Adolfo Prieto 622  
Col. del Valle  
Mexico 12, D.F.  
Tel: 543-4232, 523-1874  
Tel: 017-74-507

**NICARAGUA**  
Roberto Terán C.  
Apartado Postal 689  
Edificio Terán  
Managua  
Tel: 3451, 3452  
Cable: ROTERAN Managua

**PANAMA**  
Electrónica Balboa, S.A.  
P.O. Box 4979  
Ave. Manuel Espinosa No. 13-50  
Bldg. Alina  
Panama City  
Tel: 230823  
Telex: 3481003, Corundu,  
Canal Zone  
Cable: ELECTRON Panama City

**PARAGUAY**  
Z.J. Matamed S.R.L.  
Division: Aparatos y Equipos  
Médicos  
Salón de Exposición y Escritorio:  
Calle 482  
Edificio Victoria—Planta Baja  
Asunción, Paraguay  
Tel: 4-5049, 4-4272  
Cable: RAMEL

**PERU**  
Compañía Eléctrica Médica S.A.  
Ave. Enrique Comas 312  
San Isidro  
Casilla 1030  
Lima  
Tel: 22-3900  
Cable: ELMED Lima

**PUERTO RICO**  
San Juan Electronics, Inc.  
P.O. Box 5187  
Ponce de Leon 154  
Pda. 3-PTA de Tierra  
San Juan 00906  
Tel: (809) 725-3342, 722-3342  
Cable: SATRONICS San Juan  
Telex: SATRON 3450 332

**URUGUAY**  
Pabellón S.A.  
Comercial e Industrial  
Avenida Italia 2877  
Casilla de Correo 378  
Montevideo  
Tel: 40-3102  
Cable: RADIUM Montevideo

**VENEZUELA**  
Hewlett-Packard De Venezuela  
C.A.  
Apartado 50833  
Caracas  
Tel: 71.88.05, 71.88.89, 71.98.30  
Cable: HEWPACK Caracas  
Telex: 21146 HEWPACK

**FOR AREAS NOT LISTED,**  
CONTACT:  
Hewlett-Packard  
Inter-Americas  
3200 Millview Ave.  
Palo Alto, California 94304  
Tel: (415) 326-7000  
TWX: 910-373-1287  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493

#### CANADA

**ALBERTA**  
Hewlett-Packard (Canada) Ltd.  
11748 Kingsway Ave.  
Edmonton  
Tel: (403) 452-3670  
TWX: 810-831-2431

**BRITISH COLUMBIA**  
Hewlett-Packard (Canada) Ltd.  
4519 Canada Way  
North Burnaby 2  
Tel: (604) 433-8213  
TWX: 610-972-5059

**MANITOBA**  
Hewlett-Packard (Canada) Ltd.  
513 Century St.  
Winnipeg  
Tel: (204) 786-7581  
TWX: 610-871-3531

**NOVA SCOTIA**  
Hewlett-Packard (Canada) Ltd.  
2745 Dutch Village Rd.  
Bedford  
Tel: (902) 455-0511  
TWX: 610-271-4482

**ONTARIO**  
Hewlett-Packard (Canada) Ltd.  
1785 Woodward Dr.  
Pointe Claire  
Tel: (514) 255-4180, 255-4530  
TWX: 610-562-8968

Hewlett-Packard (Canada) Ltd.  
50 Calvary Blvd.  
Bramale  
Tel: (416) 677-9611  
TWX: 610-492-4246

**QUEBEC**  
Hewlett-Packard (Canada) Ltd.  
275 Hymus Boulevard  
Pointe Claire  
Tel: (514) 697-4232  
TWX: 610-427-3022  
Telex: 01-20607

**FOR CANADIAN AREAS NOT LISTED:**  
Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

#### EUROPE

Hewlett-Packard S.A.  
Rue de Bois de Lan 7  
P.O. Box 85  
CH-1217 Mairie 2 Geneva  
Switzerland  
Tel: (022) 41 54 00  
Cable: HEWPACK SA Geneva  
Telex: 2 24 86

#### AFRICA, ASIA, AUSTRALIA

Hewlett-Packard  
Export Trade Company  
3200 Millview Ave.  
Palo Alto, California 94304  
Tel: (415) 326-7000  
(Feb. 71 483-1501)  
TWX: 910-373-1287  
Cable: HEWPACK Palo Alto  
Telex: 034-8300, 034-8493



